


FUEL
INJECTOR NO. 6
(4.0L)

FUEL INJECTOR NO. 6 (4.0L) - 2 WAY


CAV	CIRCUIT	FUNCTION
1	K334 18BR	ASD RELAY OUTPUT
2	K58 18BR/VT	INJECTOR CONTROL NO. 6

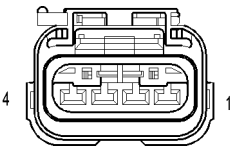

FUEL
PUMP
MODULE

FUEL PUMP MODULE - 4 WAY


CAV	CIRCUIT	FUNCTION
1	Z987 18BK	GROUND
2	N4 20DB/WT	FUEL LEVEL SENSOR SIGNAL
3	K900 20DB/DG	SENSOR GROUND
4	A109 18OR/RD	FUEL PUMP RELAY OUTPUT

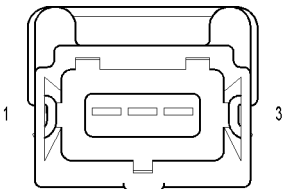

G-SWITCH

G-SWITCH - 3 WAY

CAV	CIRCUIT	FUNCTION
1	G119 20VT	G-SWITCH TEST SIGNAL
2	G117 20VT/LG	G-SWITCH NO. 1 SENSE
3	G118 20VT/YL	G-SWITCH NO. 2 SENSE

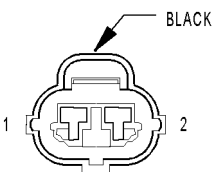

GENERATOR

GENERATOR - BLACK 2 WAY

CAV	CIRCUIT	FUNCTION
1	K125 18BR/DG (EXCEPT MAN 6 SPD TRANS)	GEN FIELD CONTROL
1	K125 20BR/DG (MAN 6 SPD TRANS)	GEN FIELD CONTROL
2	Z20 18BR/BK	GROUND