


2006 Jeep Unlimited Rear Defogger Diagram

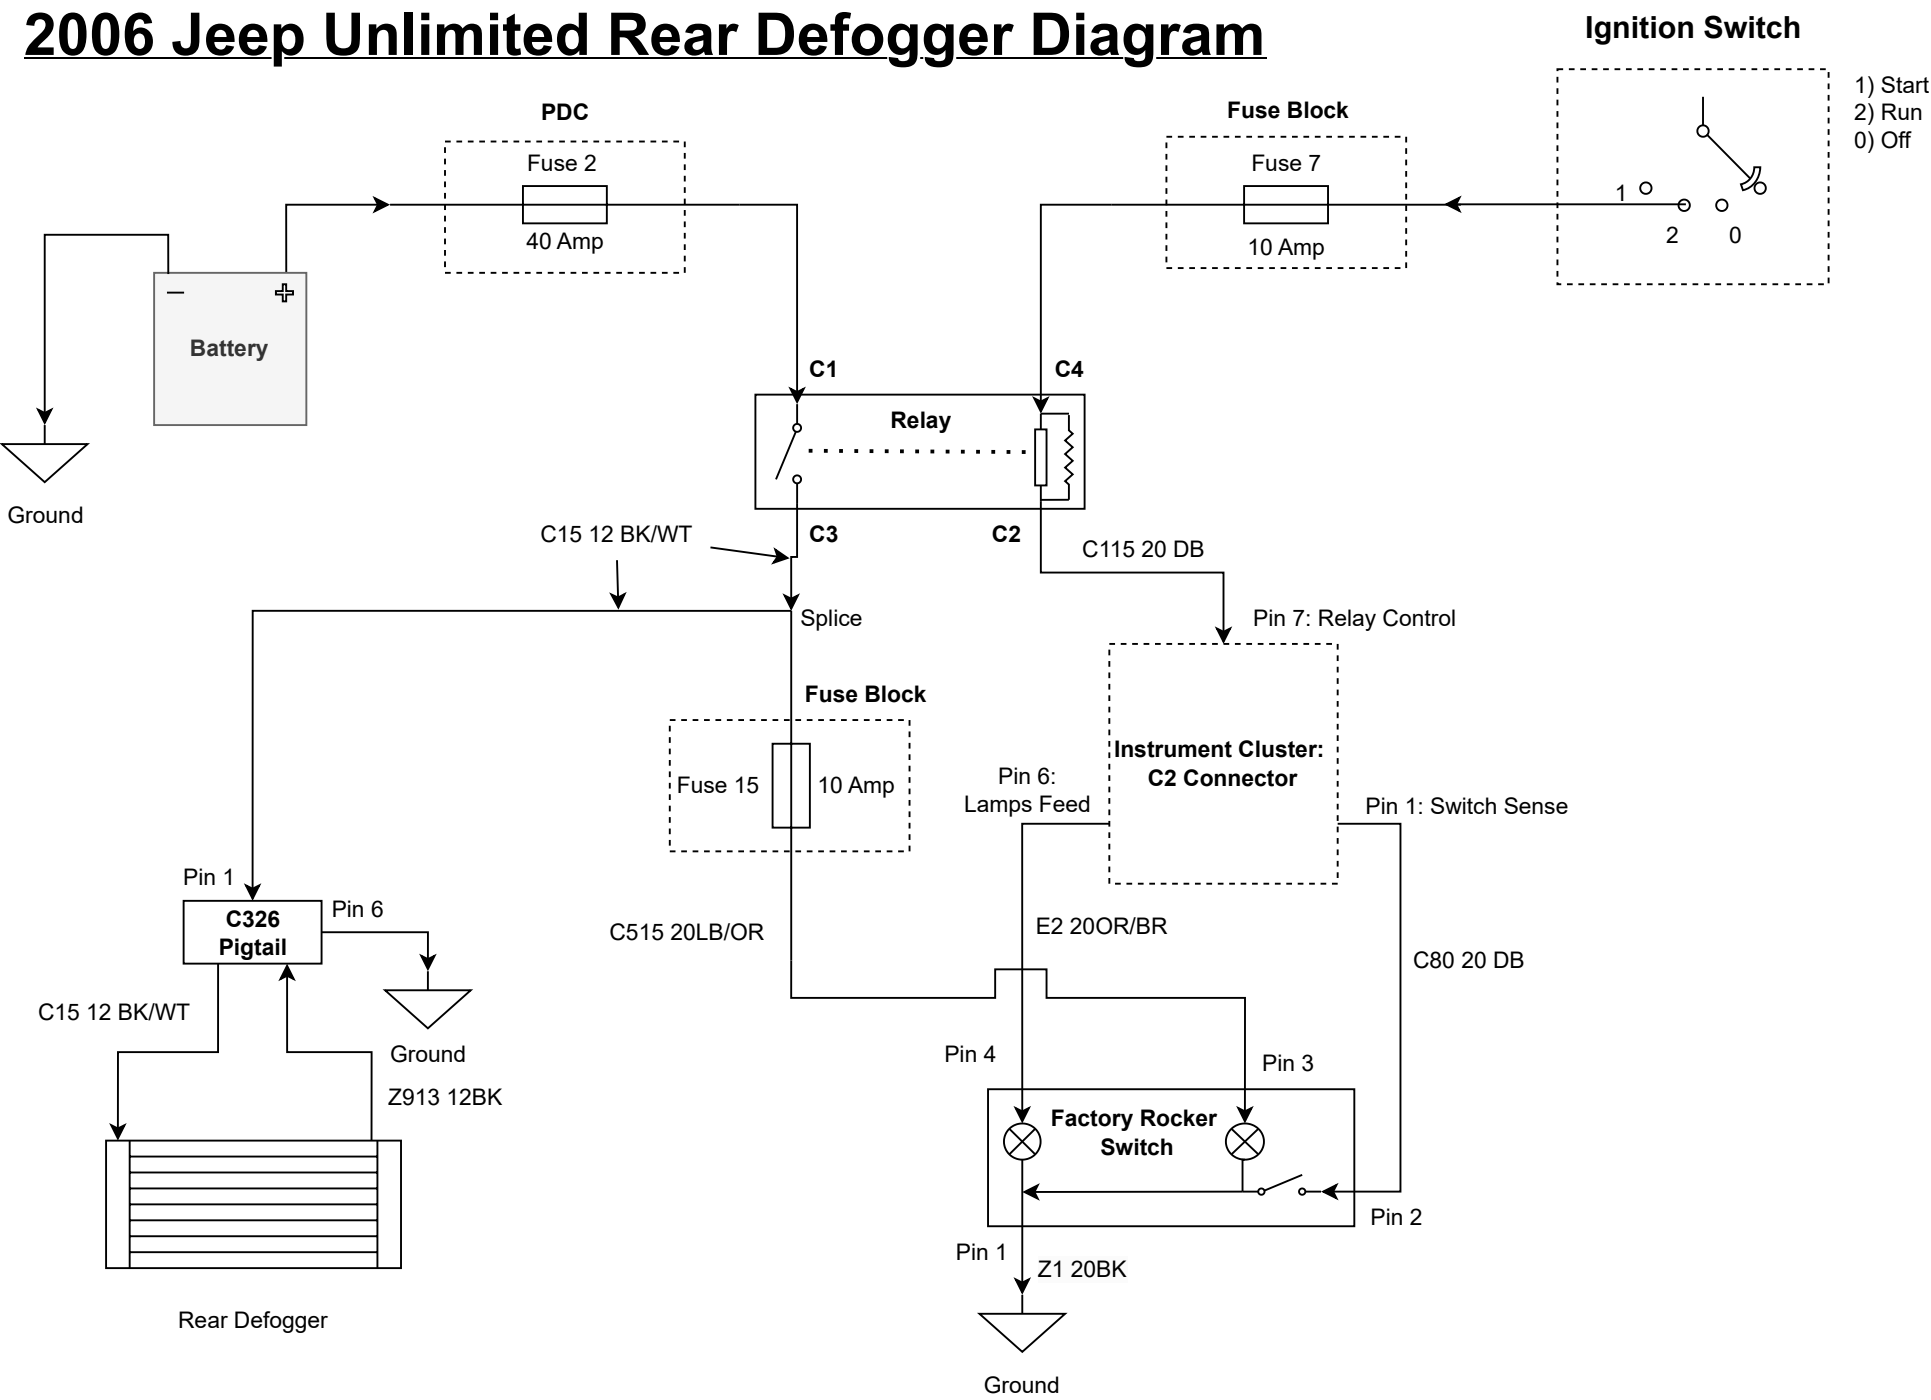


Service Manual Reference Notes:



**C326
(HARD TOP)**

C326 (HARD TOP) - (BODY SIDE)


CAV	CIRCUIT
1	C15 12BK/WT
2	-
3	W13 18BR/LG
4	F302 18GY/PK
5	F302 18GY/PK
6	Z913 12BK

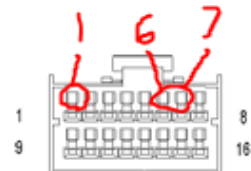

**INSTRUMENT
CLUSTER C2**

INSTRUMENT CLUSTER C2 - 16 WAY

CAV	CIRCUIT	FUNCTION
1	C80 20DB (HARD TOP)	REAR WINDOW DEFOGGER SWITCH SENSE
2	G10 20VT/LG	SEAT BELT SWITCH SENSE
3	G76 20VT/YL	PASSENGER DOOR AJAR SWITCH SENSE
4	G75 20VT	DRIVER DOOR AJAR SWITCH SENSE
5	M22 20YL/OR	COURTESY LAMPS FEED
6	E2 20OR/BR	PANEL LAMPS FEED
7	C115 20DB (HARD TOP)	REAR WINDOW DEFOGGER RELAY CONTROL
8	G4 20VT/LB (ABS)	ABS WARNING INDICATOR DRIVER
9	B83 20DG/WT	BRAKE WARNING INDICATOR DRIVER
10	G304 20VT/DB (OFF-ROAD PACKAGE)	FRONT LOCKER REQUEST
11	G93 20VT/LB (OFF-ROAD PACKAGE)	4WD INDICATOR
12	D25 20WT/VT	PCI BUS
13	G15 20VT/TN	KEY-IN IGNITION SWITCH SENSE
14	G302 20VT/OR (OFF-ROAD PACKAGE)	LOCKER ENABLE SIGNAL 1
15	E19 20OR/BR	PANEL LAMPS DIMMER SIGNAL
16	G300 20VT/WT (OFF-ROAD PACKAGE)	FRONT LOCKER INDICATOR SWITCH SENSE

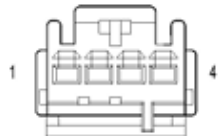

**REAR
WINDOW
DEFOGGER
SWITCH
(HARD TOP)**

REAR WINDOW DEFOGGER SWITCH (HARD TOP) - 4 WAY

CAV	CIRCUIT	FUNCTION
1	Z1 20BK	GROUND
2	C80 20DB	REAR WINDOW DEFOGGER SWITCH SENSE
3	C515 20LB/OR	FUSED REAR WINDOW DEFOGGER RELAY OUTPUT
4	E2 20OR/BR	PANEL LAMPS FEED