



POWERTRAIN CONTROL MODULE C2 - BLACK/ORANGE 38 WAY

CAV	CIRCUIT	FUNCTION
1	-	-
2	-	-
3	-	-
4	K58 18BR/VT (4.0L)	INJECTOR CONTROL NO. 6
5	K38 18BR/OR (4.0L)	INJECTOR CONTROL NO. 5
6	-	-
7	K18 18DB/OR (4.0L)	COIL CONTROL NO. 3
8	-	-
9	K17 18DB/TN (EXCEPT MAN 6 SPD TRANS)	COIL CONTROL NO. 2
9	K17 20DB/TN (MAN 6 SPD TRANS)	COIL CONTROL NO. 2
10	K19 18DB/DG (EXCEPT MAN 6 SPD TRANS)	COIL CONTROL NO. 1
10	K19 20DB/DG (MAN 6 SPD TRANS)	COIL CONTROL NO. 1
11	K14 18BR/TN (EXCEPT MAN 6 SPD TRANS)	INJECTOR CONTROL NO. 4
11	K14 20BR/TN (MAN 6 SPD TRANS)	INJECTOR CONTROL NO. 4
12	K13 18BR/LB (EXCEPT MAN 6 SPD TRANS)	INJECTOR CONTROL NO. 3
12	K13 20BR/LB (MAN 6 SPD TRANS)	INJECTOR CONTROL NO. 3
13	K12 18BR/DB (EXCEPT MAN 6 SPD TRANS)	INJECTOR CONTROL NO. 2
13	K12 20BR/DB (MAN 6 SPD TRANS)	INJECTOR CONTROL NO. 2
14	K11 18BR/YL (EXCEPT MAN 6 SPD TRANS)	INJECTOR CONTROL NO. 1
14	K11 20BR/YL (MAN 6 SPD TRANS)	INJECTOR CONTROL NO. 1
15	-	-
16	-	-
17	K199 18BR/VT	O2 2/1 HEATER CONTROL
18	K99 18BR/LG (EXCEPT MAN 6 SPD TRANS)	O2 1/1 HEATER CONTROL
18	K99 18BR/LG (MAN 6 SPD TRANS)	O2 1/1 HEATER CONTROL
19	K125 18BR/DG (EXCEPT MAN 6 SPD TRANS)	GEN FIELD CONTROL
19	K125 20BR/DG (MAN 6 SPD TRANS)	GEN FIELD CONTROL
20	K2 18VT/OR (EXCEPT MAN 6 SPD TRANS)	ECT SIGNAL
20	K2 20VT/OR (MAN 6 SPD TRANS)	ECT SIGNAL
21	K22 18BR/OR (EXCEPT MAN 6 SPD TRANS)	TP NO. 1 SIGNAL
21	K22 20BR/OR (MAN 6 SPD TRANS)	TP NO. 1 SIGNAL
22	-	-
23	K1 18VT/BR (EXCEPT MAN 6 SPD TRANS)	MAP SIGNAL
23	K1 20VT/BR (MAN 6 SPD TRANS)	MAP SIGNAL
24	-	-
25	-	-
26	Y3 18LG (EXCEPT OFF-ROAD PACKAGE EXCEPT MAN 6 SPD TRANS)	FUSED SENSOR GROUND
26	Y3 20LG (EXCEPT OFF-ROAD PACKAGE W/ MAN 6 SPD TRANS)	FUSED SENSOR GROUND
26	K77 18BR/WT (OFF-ROAD PACKAGE EXCEPT MAN 6 SPD TRANS)	TRANSFER CASE POSITION SENSOR INPUT
27	K900 18DB/DG (EXCEPT MAN 6 SPD TRANS)	SENSOR GROUND
27	K900 20DB/DG (MAN 6 SPD TRANS)	SENSOR GROUND
28	K961 18BR/VT (EXCEPT MAN 6 SPD TRANS)	IAC SIGNAL
28	K961 20BR/VT (MAN 6 SPD TRANS)	IAC SIGNAL