


Passenger Compartment

Version 1

SPARE (20A) 17	TURN SIG (20A) 13	AIRBAG (10A) 9	AIRBAG (10A) 5	PARK LPS (20A) 1
SPARE (20A) 18	FRT WIPE (20A) 14	CLUSTER (10A) 10	REAR WIPE (20A) 6	STOP LPS (20A) 2
SPARE (10A) 19	RADIO (10A) 15	PDC COILS (10A) 11	BACK-UP LP EBL ABS (20A) 7	FOG LPS (20A) 3
SPARE (5A) 20	N/A 16	PANEL LPS (5A) 12	HEVAC (20A) 8	DOOR SW DEFEAT (10A) 4
★ P / N 56009391AD				

Version 2

FRT WIPE (25A) 17	TURN SIG (10A) 13	AIRBAG (10A) 9	AIRBAG (10A) 5	PARK LPS SKIM (20A) 1
CIGAR LIGHTER (20A) 18	RADIO (10A) 14	CLUSTER (10A) 10	REAR WIPE (20A) 6	STOP LPS (20A) 2
SPARE FUSE (20A) 19	HBL SW (10A) 15	SOLENOIDS DRL (10A) 11	BACK-UP LP ABS (10A) 7	SUB- WOOFER SYSTEM (20A) 3
TRANS SEE OWNERS MANUAL (20A) 20	HEADLAMP AIM SW (10A) 16	PDC RELAYS SKIM (10A) 12	HEVAC (BLOWER FAN) (10A) 8	DOOR SW DEFEAT (10A) 4
★ 56009391AL				

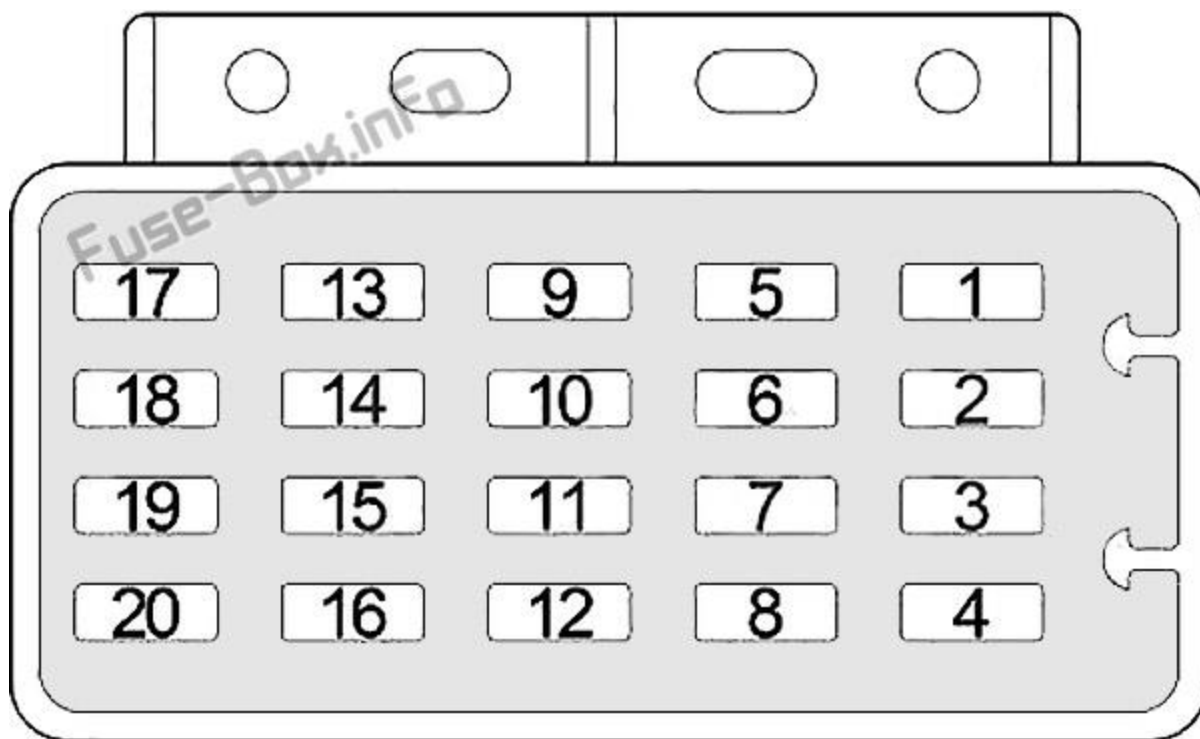

Assignment of the interior fuses

Nº	Amp Rating	Description
1	20	Headlamp Switch (Multi-Function Switch), Sentry Key Immobilizer Module
2	20	Brake Lamp Switch

№	Amp Rating	Description
3	10 / 20	1997-1998: Fog Lamp Relay №1 (20A); 1999-2002: "PRNDL" Lamp, Front Fog Lamp Switch, Radio, Rear Window Defogger Switch (Hard Top), A/C Heater Control, Rear Wiper/Washer Switch (Hard Top), Instrument Cluster, Rear Fog Lamp Switch, Headlamp Switch (10A) 2003-2006: Subwoofer, Radio Choke and Relay (20A)
4	10	Driver Door Ajar Switch, Passanger Door Ajar Switch, Fog Lamp Relay №1, Fog Lamp Relay №2, Rear Fog Lamp Relay
5	10	Airbag Control Module
6	20	Rear Wiper Motor (Hard Top), Rear Wiper/Washer Switch (Hard Top)
7	10	Park/Neutral Position (PNP) Switch (Automatic Transmission), Back-Up Lamp Switch (Manual Transmission), Controller Antilock Brake (ABS), Air Conditioner Compressor Clutch Relay, Rear Window Defogger Relay, ABS Relay

№	Amp Rating	Description
8	10 / 20	1997-1998: A/C Heater Control (20A); 1999-2006: A/C Heater Control, HVAC Unit, Blower Motor Relay, Blend Door Actuator (10A)
9	10	Airbag Control Module, Passenger Airbag On/Off Switch
10	10	Brake Shift Interlock Solenoid, Instrument Cluster, Compass/Temperature Mirror
11	10	1997-1998: Daytime Running Lamp Module, Torque Converter Clutch Solenoid, Duty Cycle EVAP/Purge Solenoid, Air Conditioner Compressor Clutch Relay, Immobilizer Module, EVAP Leak Detection Pump, Powertrain Control Module, Automatic Shut Down Relay, Fuel Pump Relay, Rear Window Defogger Relay; 1999-2006: Daytime Running Lamp Module, Torque Converter Clutch Solenoid, Duty Cycle EVAP/Purge Solenoid, Air Conditioner Compressor Clutch Relay
12	10	1997-1998: "PRNDL" Lamp, Front Fog Lamp Switch, Radio, Rear Window Defogger Switch (Hard Top), A/C Heater Control, Rear Wiper/Washer Switch (Hard Top), Instrument Cluster, Rear Fog Lamp Switch; 1999-2006: Sentry Key Immobilizer Module, Fuel Pump Relay, Automatic Shut Down Relay, Powertrain Control Module, Oxygen Sensor Downstream Heater Relay, Oxygen Sensor Upstream Heater Relay


№	Amp Rating	Description
13	10	Turn Signal/Hazard Switch (Multi-Function Switch), Passenger Airbag On/Off Switch ('97-'98)
14	10 / 20 / 25	1997-1999: Windshield Wiper Switch, Windshield Wiper Motor (20A); 2000-2002: Windshield Wiper Switch, Windshield Wiper Motor (25A); 2003-2006: Radio (10A)
15	10	1997-2002: Radio; 2003-2006: Rear Window Defogger Switch (Hard Top)
16	10	Headlamp Leveling Motor, Headlamp Leveling Switch, Rear Fog Lamp Relay
17	10 / 25	1997-2002: Rear Window Defogger Switch (Hard Top) (10A); 2003-2006: Windshield Wiper Motor, Windshield Wiper Switch (Multi-Function Switch) (25A)

№	Amp Rating	Description
18	15 / 20	1997-2002: Unswitched Auxiliary Power (15A); 2003-2006: Cigar Lighter/Power Outlet, Switched Auxiliary Power (20A)
19	20	1997-2002: Cigar Lighter/Power Outlet, Switched Auxiliary Power; 2003-2006: Spare
20	20	Engine Starter Motor Relay, Clutch Pedal Position Switch (Manual Transmission)

Advertisements

Engine Compartment

1997-1998

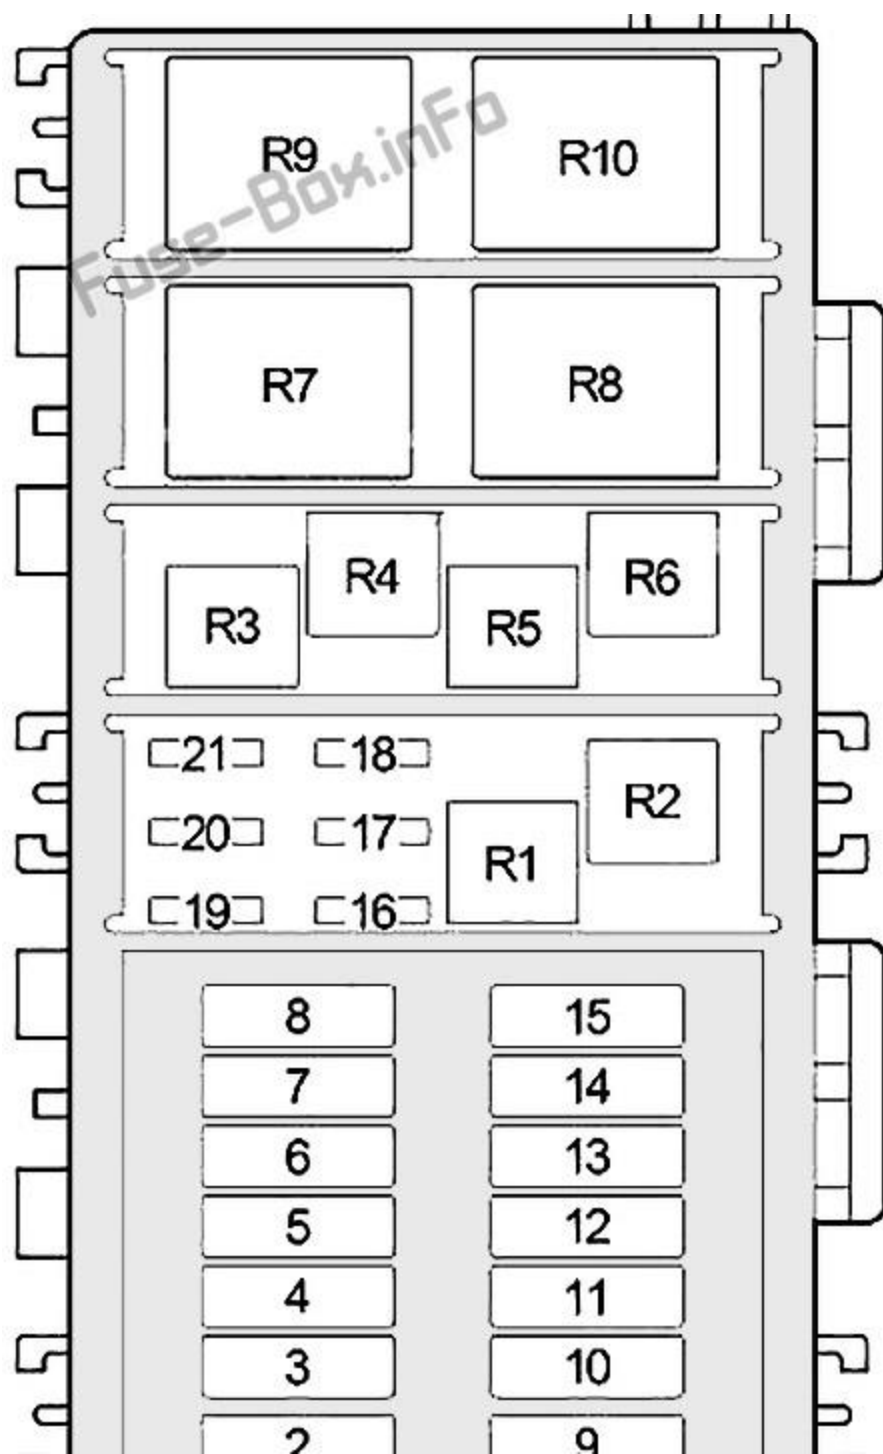

Assignment of the fuses in the engine compartment (1997-1998)


№	Amp Rating	Description
2	40	Ignition Switch (Fuse (Passenger Compartment): "5", "6", "7", "8", "20"), Engine Starter Motor Relay, Clutch Pedal Position Switch (Manual Transmission)
3	30	Ignition Switch (Cigar Lighter/Accessory Relay, Fuse (Passenger Compartment): "9", "10", "11", "13", "14", "15")
4	40	Passenger Compartment Fuse Block: "1", "2", "3"
5	40	Cigar Lighter/Accessory Relay (Passenger Compartment Fuse Block: "18", "19")
6	30	Automatic Shut Down Relay, Powertrain Control Module
7	-	Not Used
8	-	Not Used
9	20	Turn Signal/Hazard Switch

Nº	Amp Rating	Description
10	30	Headlamp Switch
11	40	Blower Motor Relay
12	-	Not Used
13	30	ABS Relay
14	40	ABS Pump Motor Relay
15	40	Rear Window Defogger Relay
16	20	Fuel Pump Relay
17	10	Dome Lamp, Instrument Cluster, Data Link Connector, Radio, Courtesy Lamp, Underhood Lamp, Sound Bar Dome Lamp
18	10	ABS Pump Motor Relay

Nº	Amp Rating	Description
19	10	Air Conditioner Compressor Clutch Relay
20	20	Horn Relay
21	20	Ignition Coil, Fuel Injector, Oxygen Sensor
Relay		
R1		Fuel Pump
R2		Not Used
R3		Automatic Shut Down
R4		Air Conditioner Compressor Clutch
R5		Horn

№	Amp Rating	Description
R6		ABS
R7		Not Used
R8		ABS Pump Motor
R9		Engine Starter Motor
R10		Rear Window Defogger

Advertisements

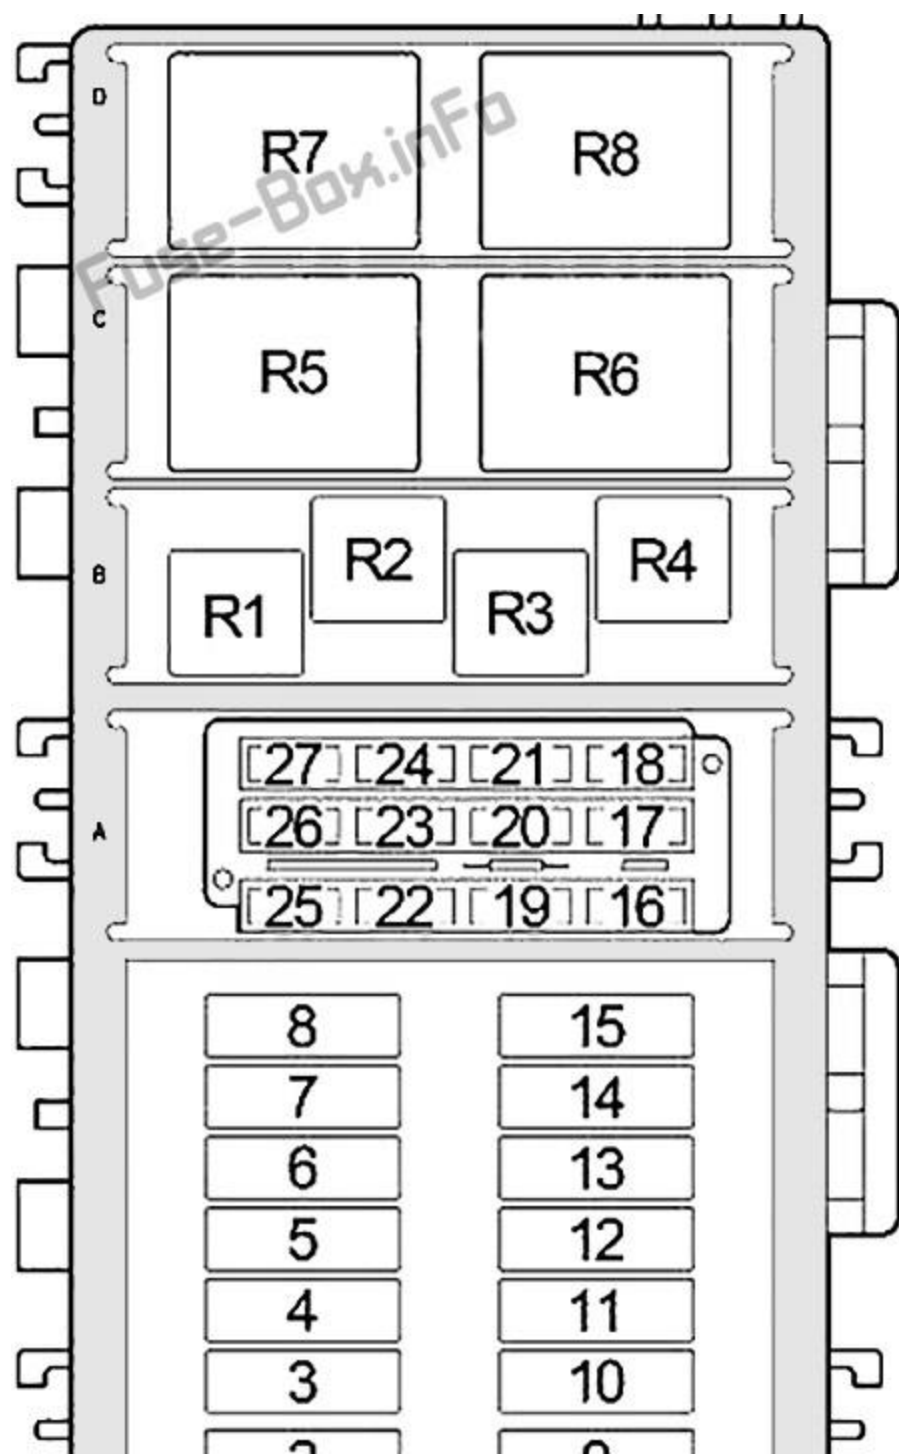

Assignment of the fuses in the engine compartment (1999)


№	Amp Rating	Description
2	40	Ignition Switch (Fuse (Passenger Compartment): "5", "6", "7", "8"), Engine Starter Motor Relay
3	30	Ignition Switch (Cigar Lighter/Accessory Relay, Fuse (Passenger Compartment): "9", "10", "11", "12", "13", "14", "15", "20")
4	40	Fuse (Passenger Compartment): "1", "2"
5	40	Cigar Lighter/Accessory Relay (Fuse (Passenger Compartment): "19", "18")
6	30	Automatic Shut Down Relay, Powertrain Control Module
7	-	Not Used
8	-	Not Used
9	20	Turn Signal/Hazard Switch

№	Amp Rating	Description
10	30	Headlamp Switch
11	40	HVAC Unit
12	-	Not Used
13	30	ABS Relay
14	40	ABS Pump Motor Relay
15	40	Rear Window Defogger Relay
16	10	Air Conditioner Compressor Clutch Relay
17	20	Horn Relay
18	20	Fuel Injector, Ignition Coi (2.5 L)

Nº	Amp Rating	Description
19	20	Fuel Pump Relay
20	10	Underhood Lamp, Left Courtesy Lamp, Right Courtesy Lamp, Radio, Data Link Connector, Dome Lamp (Hard Top), Sound Bar Dome Lamp (4 Speaker System),
21	10	ABS Pump Motor Relay
22	-	Not Used
23	-	Not Used
24	-	Not Used
25	20	Fog Lamp Relay No.1
26	-	Not Used
27	10	Leak Detection Pump, Oxygen Sensor

Nº	Amp Rating	Description
Relay		
R1		Automatic Shut Down
R2		Air Conditioner Compressor Clutch
R3		Horn
R4		Fuel Pump
R5		ABS
R6		ABS Pump Motor
R7		Engine Starter Motor
R8		Rear Window Defogger

2000-2006

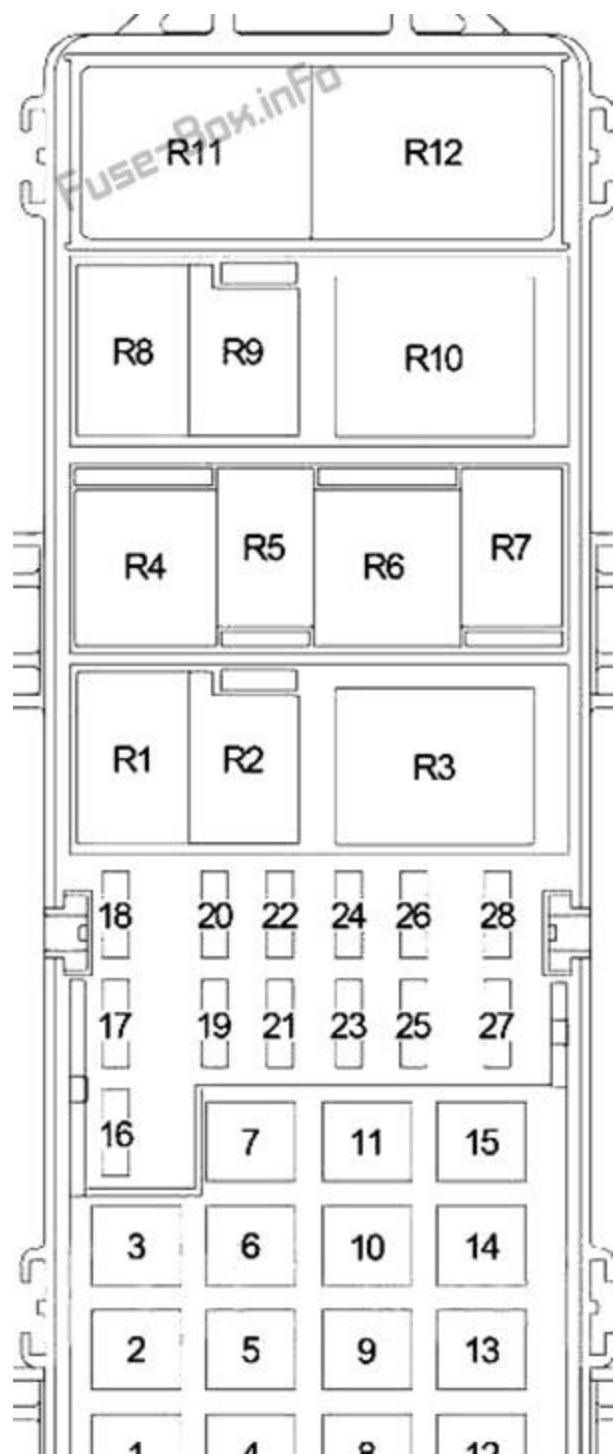

Assignment of the fuses in the engine compartment (2000-2006)

Nº	Amp Rating	Description
1	40	Blower Motor Relay (HEVAC)
2	40	Rear Window Defogger Relay
3	40	Fuse (Passenger Compartment): "1", "2", "3" / Exterior Lighting
4	40	High Speed Radiator Fan, Low Speed Radiator Fan
5	20	2000-2002: Not Used; 2003-2006: Transmission Control Relay
6	30 / 40	2000-2001: ABS Pump Motor Relay (40A); 2002: Engine Starter Motor Relay, Ignition Switch (Fuse (Passenger Compartment): "5", "6", "7", "8") (40A);

№	Amp Rating	Description
		2003-2006: Engine Starter Motor Relay, Ignition Switch (Fuse (Passenger Compartment): "5", "6", "7", "8") (30A)
7	20 / 30	2000-2001: ABS Relay (30A); 2002: Multi-Function Switch (20A); 2003-2006: Not Used
8	40	2000-2001: Engine Starter Motor Relay, Ignition Switch (Fuse (Passenger Compartment): "5", "6", "7", "8"); 2002-2006: ABS Motor
9	20 / 30	2000-2004: Automatic Shut Down Relay, Powertrain Control Module (30A); 2005-2006: Automatic Shut Down (ASD) Relay, Powertrain Control Module (20A)

№	Amp Rating	Description
10	30 / 40	2000-2001: Headlamp Switch (30A); 2002-2006: HD/LP (40A)
11	20	Turn Signal/Hazard Switch / IOD Storage
12	30	ABS Valve
13	40	Ignition Switch (Fuse (Passenger Compartment): "17", "18", "19")
14	30	2000-2001: Ignition Switch (Cigar Lighter/Accessory Relay, Fuse (Passenger Compartment): "9", "10", "11", "12", "13", "14", "15", "22"), Clutch Pedal Position Switch (Manual Transmission); 2002: Ignition Switch (Fuse (Passenger Compartment): "9", "10", "11", "12", "13", "14", "15", "20"), Clutch Pedal Position Switch (Manual Transmission); 2003-2006: Not Used
15	40 / 50	2000-2001: Cigar Lighter/Accessory Relay (Fuse (Passenger Compartment): "19"), Fuse (Passenger Compartment): "18" (40A);

№	Amp Rating	Description
		2002: Fuse: "24" (50A); 2003-2006: Fuse: "26" / IOD (50A)
16	10 / 15	2000-2001: Oxygen Sensor (10A); 2002-2004: Oxygen Sensor Downstream Heater Relay (15A); 2005-2006: Not Used
17	20	2000-2001: Oxygen Sensor Downstream Heater Relay, Oxygen Sensor Upstream Heater Relay; 2003-2006: Power Outlet
18	20	Horn Relay
19	20	Multi-Function Switch (Front Fog Lamps)

№	Amp Rating	Description
20	15	2000-2002: Not Used; 2003-2006: Radio
21	10	Air Conditioner Compressor Clutch Relay
22	20	2000-2002: Not Used; 2003-2006: Ignition Switch (Fuse (Passenger Compartment): "9", "10", "11", "12", "13", "14", "22"), Clutch Pedal Position Switch (Manual Transmission)
23	20	Fuel Pump Relay
24	10 / 20	2000-2001: Not Used; 2002: Dome Lamp, Instrument Cluster, Data Link Connector, Radio, Courtesy Lamp, Underhood Lamp, Sound Bar Dome Lamp (10A) 2003-2006: Rear Locker Relay (Off-road Package), Front Locker (Off-road Package) (20A)

№	Amp Rating	Description
25	10	2000-2001: Dome Lamp, Instrument Cluster, Data Link Connector, Radio, Courtesy Lamp, Underhood Lamp, Sound Bar Dome Lamp; 2002-2006: Not Used
26	10 / 20	2000-2002: Ignition Coil, Fuel Injector (20A); 2003-2006: Dome Lamp, Instrument Cluster, Data Link Connector, Axle Lock Switch (Off-road Package), Courtesy Lamp, Compass/Temperature Mirror, Underhood Lamp (10A)
27	20	2000-2002: Not Used; 2003-2006: Multi-Function Switch
28	10 / 20	2000-2001: ABS (10A); Clutch Override 2003-2006: Automatic Shut Down Relay, Ignition Coil, Fuel Injector, Coil Capacitor (20A)

№	Amp Rating	Description
Relay		
R1		Automatic Shut Down
R2		Air Conditioner Compressor Clutch
R3		2000-2002: Not Used; 2003-2006: Transmission Control
R4		Engine Starter Motor
R5		ABS
R6		2000-2004: Oxygen Sensor Downstream Heater; 2005-2006: Not Used

№	Amp Rating	Description
R7		2000-2001: Oxygen Sensor Upstream Heater; 2002-2006: Fog Lamp
R8		Horn
R9		Fuel Pump
R10		Rear Window Defogger
R11		2003-2006: Front Locker (Off-road Package); 2005-2006: High Speed Radiator Fan (2.4 L PowerTech)
R12		2000-2001: ABS; 2003-2006: Rear Locker (Off-road Package); 2005-2006: Low Speed Radiator Fan (2.4 L PowerTech)