


# **ARB** **AIR** **LIFTER** **LOCKING DIFFERENTIALS** **INSTALLATION GUIDE**

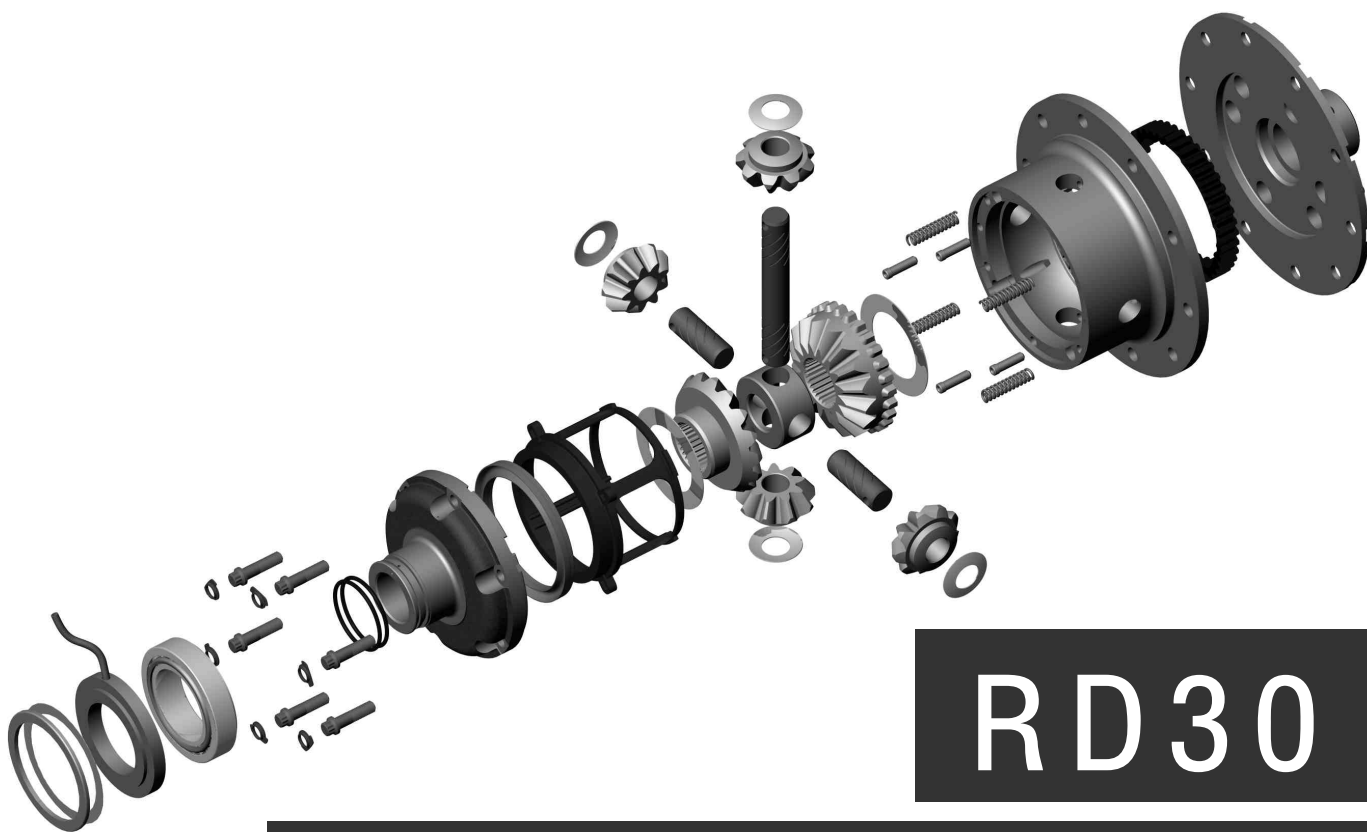

**RD30**

**DANA 30, 27 SPLINE, 3.73 & UP**

Part No. 210230  
Revision Date 08/06/01  
Copyright © 2001 by ARB Corporation Limited

No liability is assumed for damages resulting in the use of the information contained herein.  
ARB Air Locker Locking Differentials and Air Locker are trademarks of ARB Corporation Limited.  
Other product names used herein are for identification purposes only and may be trademarks of their respective owners.

---

# ARB 4x4 ACCESSORIES

## Corporate Head Office

42-44 Garden St  
Kilsyth, Victoria  
AUSTRALIA  
3137

Tel: +61 (3) 9761 6622  
Fax: +61 (3) 9761 6807

Australian enquiries  
North and South American enquiries  
Other international enquiries

[sales@arb.com.au](mailto:sales@arb.com.au)  
[sales@arbusa.com](mailto:sales@arbusa.com)  
[exports@arb.com.au](mailto:exports@arb.com.au)

---

[www.arb.com.au](http://www.arb.com.au)

## Table of Contents:

<b>1</b>	<b>Introduction</b>	<b>3</b>
1.1	Pre-Installation Preparation	3
1.2	Tool-Kit Recommendations	4
<b>2</b>	<b>Removing the Existing Differential</b>	<b>5</b>
2.1	Vehicle Support	5
2.2	Differential Fluid Drain	5
2.3	Removing the Axles	5
2.4	Marking the Bearing Caps	6
2.5	Checking the Current Backlash Amount	7
2.6	Spreading the Differential Housing	8
<b>3</b>	<b>Bench Measurement</b>	<b>9</b>
3.1	Measurement for Pre-Load Shimming	9
3.2	Calculation & Selection of Shims	11
<b>4</b>	<b>Installing the Air Locker</b>	<b>12</b>
4.1	Installing the Carrier Bearings	12
4.2	Mounting the Ring Gear	13
4.3	Drilling & Tapping the Bulkhead Port	14
4.4	Assembling the Differential Carrier	15
4.5	Approximating the Backlash for Tube Position	16
4.6	Marking the Bearing Cap for Tube Clearance	18
4.7	Modifying the Bearing Cap	20
4.8	Axle Tube Drainage Modification	22
4.9	Final Air Locker Assembly	23
4.10	Final Backlash Checking	23
4.11	Profiling the Seal Housing Tube	25
4.12	Setting Up the Inner Bulkhead Fitting	25
4.13	Reinstalling the Axles	27
<b>5</b>	<b>Installing the Air System</b>	<b>28</b>
5.1	Mounting the Solenoid	28
5.2	Running & Securing the Air Line	30
5.3	Connection to the Bulkhead Fitting	31
<b>6</b>	<b>Mounting &amp; Connecting the Electrical System</b>	<b>33</b>
6.1	Mounting the Actuator Switch(es)	33
6.2	Wiring the Actuator System	34
<b>7</b>	<b>Testing &amp; Final Assembly</b>	<b>38</b>
7.1	Leak Testing	38
7.2	Testing the Air Locker Actuation	38
7.3	Re-Sealing & Filling the Differential	39
7.4	Post-Installation Check List	40
<b>8</b>	<b>Parts List</b>	<b>41</b>
8.1	Exploded Assembly Diagram	41
8.2	Itemized Parts List	42

# ARB AIR LOCKER LOCKING DIFFERENTIALS

# 1 Introduction

## **IMPORTANT :**

**BEFORE ATTEMPTING TO DISMANTLE YOUR VEHICLE FOR THIS INSTALLATION, PLEASE READ THIS INSTALLATION GUIDE IN ITS ENTIRETY, AS WELL AS ALL APPLICABLE SECTIONS OF YOUR VEHICLE MANUFACTURER'S SERVICE MANUAL.**

### **1.1 Pre-Installation Preparation**

This booklet is to be used in conjunction with your vehicle manufacturer's service manual. ARB endeavors to account for every possible variation in vehicle model when publishing its installation guides, and guides are updated regularly as new model information becomes available, however, the rapid and globally varied release of some vehicles makes it difficult to insure that your vehicle model has been accurately accounted for. In the case of any technical discrepancies between this guide and your service manual, we strongly advise that you adhere to the specifications and techniques as documented in your service manual.

Although your *ARB Air Locker* comes complete with all the step by step instructions you will need to supplement your vehicle manufacturer's service manual and install your new differential, ARB recommends that you have your *Air Locker* installed by a trained professional. Many ARB distributors around the world have been fully instructed in *Air Locker* installations by ARB, and have gained a wealth of experience and skill from years of performing similar installations.

Once you begin this installation your vehicle will be immobile until all steps of the installation are complete. Make sure your *Air Locker* kit is the correct model for your vehicle and that it contains all of the parts listed on back cover of this booklet. Also be sure you have appropriately equipped yourself with all the necessary tools, parts, and materials to complete this installation (see section 1.2 *Tool-Kit Recommendations*), and that you have allowed for an appropriate amount of vehicle down time.

#### **HINT :**

Place a ✓ mark inside each of the ☐ symbols as you complete each step. It is very important NOT to miss any of the steps!

# 1 Introduction

## 1.2 Tool-Kit Recommendations

Below is a list of tools and supplies you may need to complete this installation. Requirements for your vehicle may vary. Please consult your vehicle service manual for additional recommendations.

### 1.2.1 TOOLS

- ☐ Standard automotive sizes (metric and/or imperial) of sockets, wrenches, Alan keys, and drills.
- ☐ A dial indicator or other suitable measuring tool for checking ring & pinion backlash.
- ☐ A standard automotive feeler gauge.
- ☐ Automotive brake tubing cutters to cut the steel tubing.
- ☐ A razor knife to cut the nylon tubing.
- ☐ A differential housing spreader, to facilitate removal of the carrier.
- ☐ A torque wrench. (See vehicle service manual for required torque range.)
- ☐ A lubricant drain reservoir.
- ☐ Suitable measuring tools to measure a differential for pre-load and/or backlash shimming. (See Section 3 *Bench Measurement*)
- ☐ A 11.2mm [7/16"] drill and 1/4" NPT tap for bulkhead fitting installation.
- ☐ An automotive bearing puller (2 jawed is recommended) or a differential carrier bearing puller.
- ☐ A bearing press or arbor press.

### 1.2.2 SUPPLIES

- ☐ Thread lubricant/sealant compound (e.g., LOCTITE #567)
- ☐ Thread locking compound (e.g., LOCTITE #272)
- ☐ Either a replacement gasket, or gasket sealant, for your differential cover.
- ☐ A sufficient volume of differential oil to completely refill your housing. (see the *ARB Air Locker Operating and Service Manual* for recommended lubricants)
- ☐ A soap and water mixture to test for air leaks.
- ☐ Teflon paste.
- ☐ A selection of differential bearing shims to set-up pre-load and backlash. (See section 3 *Bench Measurement*)

## 2 Removing the Existing Differential

### 2.1 Vehicle Support

- ☐ Safely secure the vehicle on a hoist. We recommend supporting the vehicle on a chassis hoist to keep the differential area at a convenient working height and to leave the wheels and axles free to be rotated and removed.
- ☐ Once supported off the ground, release the parking brake and leave the vehicle in neutral. Chock the wheels if necessary.

### 2.2 Differential Fluid Drain

- ☐ Clean around the differential cover plate seal to prevent dirt from entering the differential.
- ☐ Position a fluid drain reservoir under the differential and loosen all differential cover plate retaining bolts.
- ☐ Gently pry the cover plate away from the differential housing to completely drain all differential fluid.
- ☐ Once drained, remove differential cover plate.

**HINT :** This is a good time to check for metal particles in your oil and in the bottom of the housing which may indicate a worn bearing or differential component.

### 2.3 Removing the Axles

#### **IMPORTANT :**

Collision damage or heavy off-road use of your vehicle in the past may have resulted in some degree of bending in the axle. Any misalignment of the axle tubes may result in excessive wear and/or failure of your differential and axle shafts. ARB strongly recommends that you have your axle assembly inspected for concentricity and straightness before installing your *Air Locker*.

- ☐ Remove the wheels, brakes, and axles according to your vehicle manufacturer's service manual.

## 2 Removing the Existing Differential

### 2.4 Marking the Bearing Caps

- ☐ Using a pointed center punch, gently mark the bearing caps in a way that will enable you to know which cap is 'LEFT' and which cap is 'RIGHT', which way is 'UP' and which way is 'DOWN'.  
(Fig.1.)

**HINT :** Many installers choose to make one punch mark on the left hand side of the left hand bearing cap and one similar punch mark on the housing at close proximity to the cap mark. The right hand side is then designated with two punch marks on the right hand side of the cap and two similar punch marks on the housing.





## 2 Removing the Existing Differential


### 2.5 Checking the Current Backlash Amount

#### **IMPORTANT:**

This step is a precautionary measure recommended by ARB due to the fact that some after market ring and pinion sets have been manufactured to run with different backlash settings than those specified by your vehicle manufacturer. Although ARB must recommend you set backlash according to your service manual guidelines, we also advise that you compare the backlash measurements taken here to the recommended backlash settings in your vehicle service manual. Measurements found to be outside of your service manual recommendations may indicate the need to deviate from those settings in order to achieve quiet running with a good contact mark.

Refer to your vehicle service manual or your local authorized ARB installer for more information.

- ☐ Set a depth indicator on one of the ring gear teeth as in figure 2.

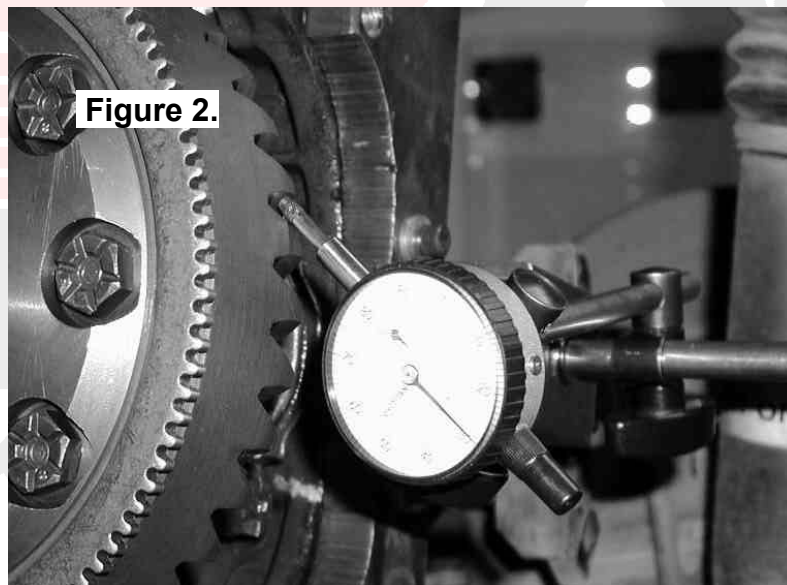

- ☐ While supporting the pinion gear by holding the drive shaft, rotate the differential in both directions while observing the maximum variation in depth from the indicator (i.e., the highest value minus the lowest value). This value is referred to as the ring and pinion backlash.
- ☐ Rotate the differential center 90° and measure again for accuracy.
- ☐ Record the average of all measurements.

## 2 Removing the Existing Differential

### 2.6 Spreading the Differential Housing

#### **IMPORTANT:**

Spreading the differential housing with a differential case spreader is a step which is critical to set up bearing pre-load when a differential is installed. Improper pre-load will result in undue bearing wear, increased stresses in the differential center, increased running noise, and ultimately, ring and pinion gear damage.


- ☐ Unbolt and remove the bearing caps from the differential housing.

**HINT :** Be sure not to mix up the left and right hand bearing caps. Later it will be necessary to know which cup came from which bearing and which shim came from which side.

- ☐ Carefully spread the housing (Fig. 3.) enough to remove the differential center. (Refer to your vehicle's service manual).

**NOTE :** Do not spread the housing more than 0.50mm [0.020"].

- ☐ Once the housing has been adequately spread, the differential may be removed by pulling forward on the differential carrier.

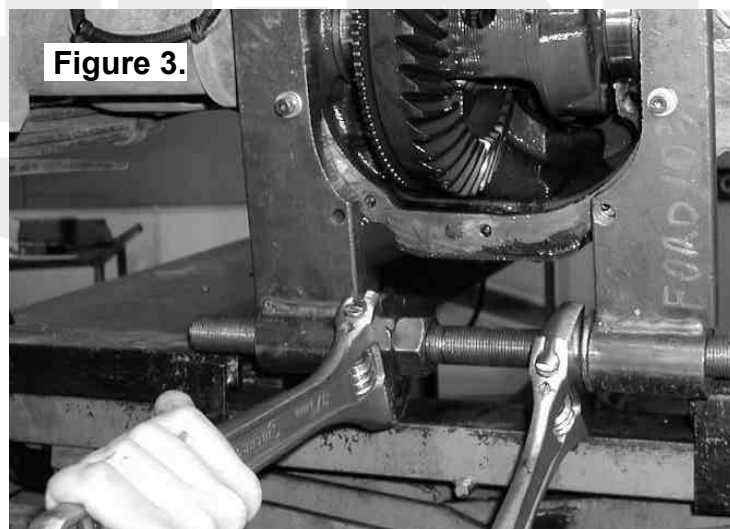

**NOTE :** The differential center is heavy and quite difficult to handle when covered in oil. Take care not to drop it.

### 3 Bench Measurement

#### 3.1 Measurement for Pre-Load Shimming

When fitting an ARB *Air Locker*, a replacement bearing and variable shim pack (supplied) are used on the right hand side (opposite the ring gear) in order to achieve the correct ring and pinion backlash and carrier bearing pre-load once the *Air Locker* has been installed. Because of this, the original shims and bearing from this side will not be reused.

The original bearing type and shim type are used on the left hand (ring gear) side of the *Air Locker*, however, in order to reproduce a similar backlash and pre-load to that of your existing differential, measurements need to be taken so that the correct shim thickness can be determined for this side.

- ☐ Secure the differential to a work bench.
- ☐ Remove the bolts that hold the ring gear in place.
- ☐ Using a plastic or copper hammer, tap in a circle around the ring gear to separate it from the differential carrier.
- ☐ Remove the original bearings and shims from the differential carrier using a bearing puller.

**NOTE :** Keep the shims separated so that they can be identified as to which end of the differential they came from.

- ☐ Using a caliper or similarly accurate measurement method (i.e., able to take accurate measurements within 0.04mm [0.0015"]), measure the distance from the bearing shoulder to the ring gear mounting face (shown as 'A' in Figure 4.) and record this measurement as 'A'.
- ☐ Measure the thickness of the shim pack removed from the ring gear side of the differential carrier (shown as 'B' in Figure 4.) and record this measurement as 'B'.
- ☐ Measure the distance from the *Air Locker* bearing shoulder to the ring gear mounting face (shown as 'C' in Figure 5.) and record this measurement as 'C'.

### 3 Bench Measurement

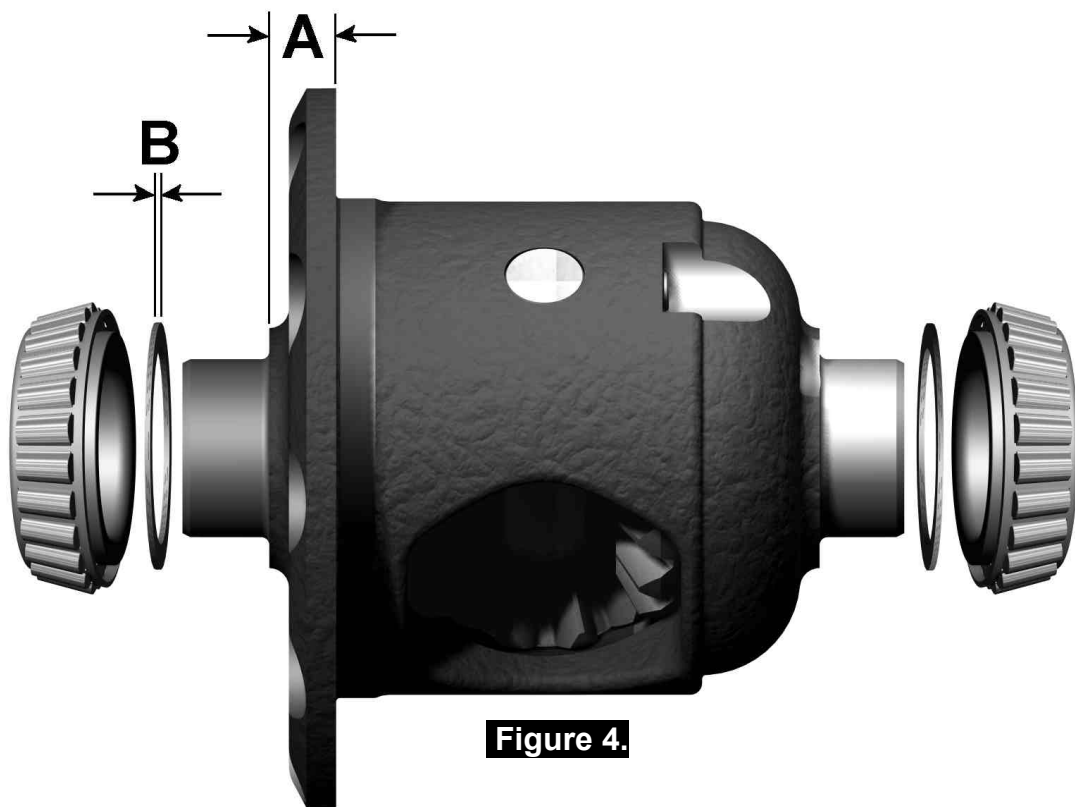


Figure 4.

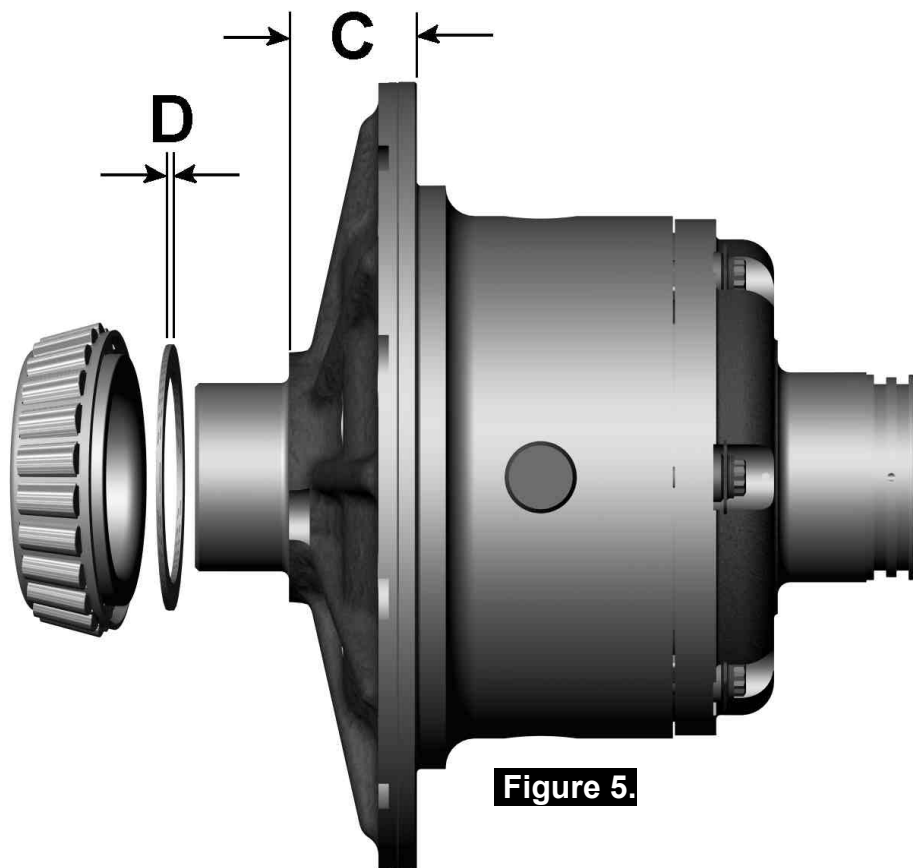


Figure 5.

### 3 Bench Measurement

#### 3.2 Calculation & Selection of Shims

The thickness of the shim pack required for the *Air Locker* (shown as 'D' in Figure 5.) can now be determined by substituting the measurements taken into the following equation.

$$A + B - C = D$$

**HINT :** If your calculations are correct then the following equation will also be true:

$$A + B - C - D = \text{ZERO}$$

To make a shim pack to match the measurement you calculated as 'D' you can:

- remove shims from the shim pack you measured as 'B'.
- add some shims from the shim pack you removed from the right hand side of the original differential to the shim pack you measured as 'B'.
- supplement your original shims with shims purchased from your vehicle manufacturer.
- Use a universal shim kit available from most drive train specialists.

**NOTE :** Never re-use any shims which are damaged or worn.

## 4 Installing the Air Locker

### 4.1 Installing the Carrier Bearings

- ☐ With the *Air Locker* well supported in an arbor press, apply a thin film of high pressure grease to the ring gear side bearing journal, and assemble the newly established shim pack onto the bearing journal.
- ☐ Press the tapered roller bearing cone onto the bearing journal of the differential carrier until the bearing seats firmly against the shim pack.

**NOTE :** Never re-use any bearings which are damaged or worn.

- ☐ Invert the *Air Locker* and apply a thin film of high pressure grease to the seal housing side bearing journal.
- ☐ Press the bearing cone which was supplied with the *Air Locker* kit onto the bearing journal, taking care not to damage the o-ring grooves. (Figure 6.)

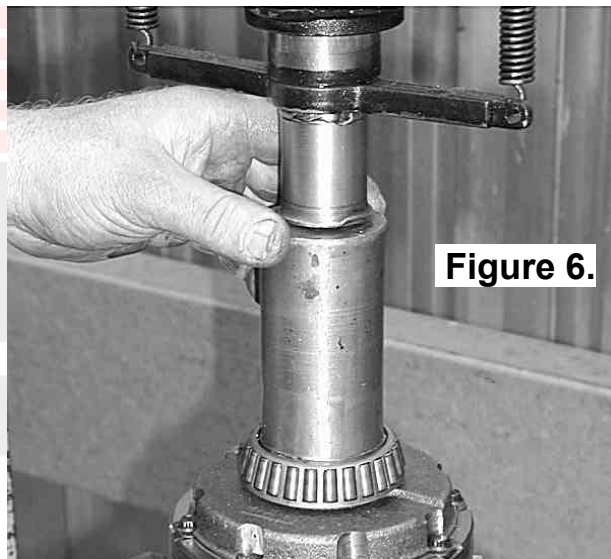


Figure 6.

**NOTE :** Do not add any shims between the seal housing bearing and the bearing seat.

## 4 Installing the Air Locker

### 4.2 Mounting the Ring Gear

- ☐ Apply a thin film of high-pressure grease to the ring gear shoulder of the *Air Locker* to prevent seizing.
- ☐ Thoroughly clean any thread locking compound or other foreign matter from the holes of the ring gear, the threads of the ring gear bolts, and the mating surfaces of the ring gear and the *Air Locker* flange.

**NOTE :** Rubbing the ring gear mounting face with a flat oil stone before installation will remove any high spots around the threads.

- ☐ Heat the ring gear to between 80 and 100°C (175 - 212°F) in an oven or in hot water to slightly expand the gear and facilitate assembly.

**NOTE :** **NEVER HEAT GEARS WITH A FLAME!** This could damage the hardened surface of the gear and result in premature wear or failure.

- ☐ Dry the ring gear with compressed air (if wet), paying particular attention to the threaded holes.
- ☐ Install the ring gear onto the *Air Locker* by aligning the holes in the flange with the tapped holes in the ring gear, then gently tapping it around in a circle with a plastic or copper hammer.

**NOTE :** Avoid using the bolts to pull down the ring gear as this puts excess strain on the bolts and the differential flange.

- ☐ Apply a thread locking compound to the thread of each ring gear bolt before inserting it.

**NOTE :** Do not apply threading compound directly into the threaded hole as this could prevent the bolt from reaching its full depth.

- ☐ Tighten the ring gear bolts in a star pattern with a torque wrench according to your vehicle manufacturer's specified torque.




## 4 Installing the Air Locker

### 4.3 Drilling and Tapping the Bulkhead Port

A port must be drilled and tapped through the differential housing to allow the seal housing tube through the housing to connect with the air line from the air compressor.

- ☐ Mark a spot for the bulkhead port on the right hand (seal housing) side toward the top of the differential housing that is in an area that will be well clear of the ring gear, the differential, and any other obstructions that may snag the seal housing tube.
- ☐ Cover the drive pinion and axle tube areas with a rag to protect them from metal filings.

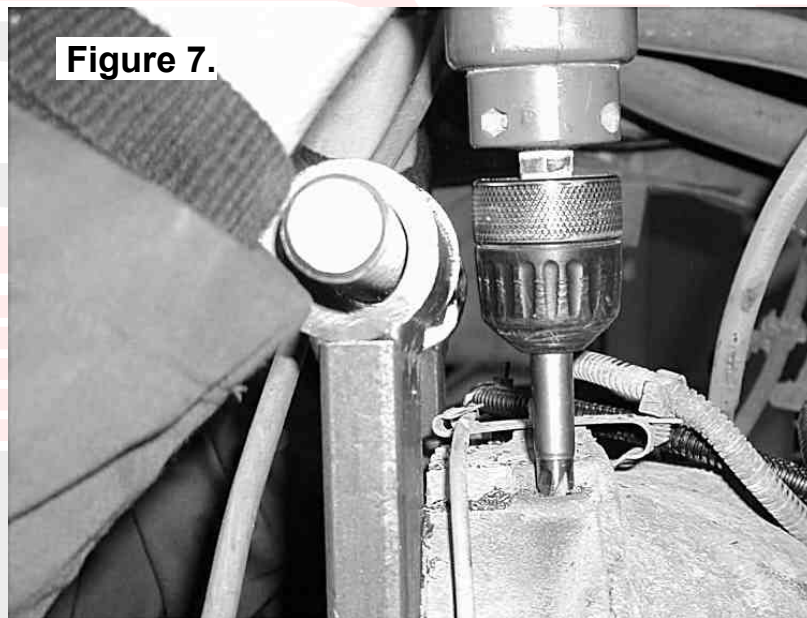

**Figure 7.**


- ☐ Drill through the housing square to the outside surface using an 11.2mm [7/16"] drill. (Fig.7.)
- ☐ Tap the hole from the outside using a 1/4" NPT tapered pipe thread tap.
- ☐ Remove any sharp edges from the hole that may chip-off and fall into the housing.
- ☐ Very carefully remove rags and inspect with a service light inside the housing to insure no metal filings are left behind.



## 4 Installing the Air Locker

### 4.4 Assembling the Differential Carrier

- ☐ Relieve all tension on the housing spreader.
- ☐ Place the bearing cup over the bearing cone (Figure 8.).

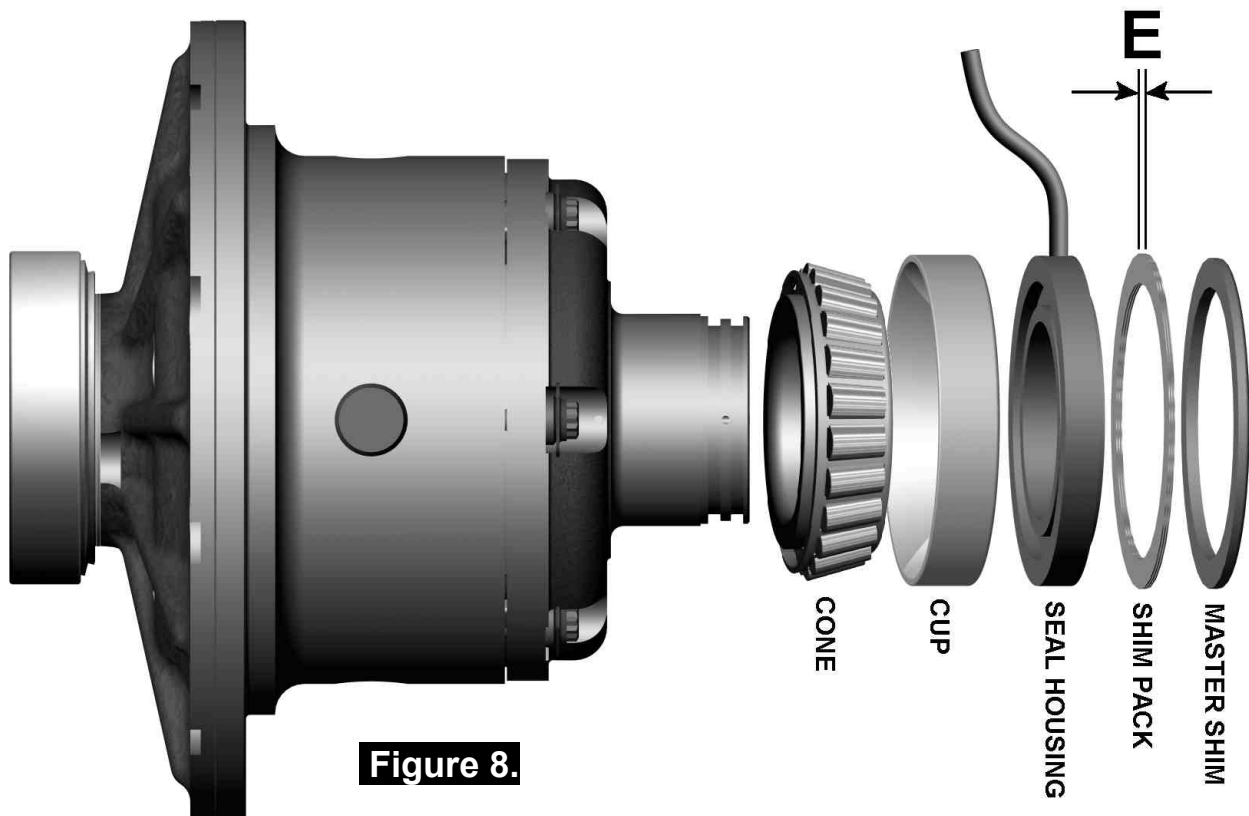

- ☐ Slide the seal housing into place against the bearing cup (stepped side out).

**NOTE :** The grooves in the bearing journal under the seal housing, will house the O-rings in the final assembly but they will not be installed now to avoid damage to the O-rings.

- ☐ Install the supplied master shim onto the seal housing.

**NOTE :** The shim pack cannot be installed at this time as the required thickness (shown as 'E' in Figure 8.) has yet to be determined.

## 4 Installing the Air Locker

- ☐ Hold the bearing cup in place on the ring gear side.
- ☐ Holding the master shim and tapered roller bearing cup in place at each end, insert and hold the *Air Locker* into the differential housing with the seal housing tube pointing straight out of the housing.
- ☐ Install one bearing cap on the ring gear side. The bearing cap on the seal housing side will need to be drilled or slotted as clearance for the seal housing tube.
- ☐ Install the bearing cap bolts finger tight.
- ☐ Push the *Air Locker* hard across to the ring gear side, and measure the gap (end float) between the master shim and the housing with a feeler gauge.
- ☐ Consult your vehicle manufacturer's service manual to determine the carrier bearing pre-load amount specified for your vehicle.
- ☐ Add the specified pre-load amount to the measurement taken with the feeler gauge to determine a shim amount for 'E' in Figure 8.

$$\text{PRE-LOAD} + \text{END FLOAT} = \text{SHIM PACK}$$

- ☐ Select suitable shims from the supplied shim kit to make up a shim pack of this thickness.
- ☐ Remove the *Air Locker* and assemble the shim pack onto the seal housing spigot behind the master shim (Figure 8.).
- ☐ Spread the differential housing again (Refer to section 2.6).

**NOTE :**

**If the carrier is too difficult to install with the added shim pack then the spreader tension may need to be increased. Do not spread the housing more than 0.50mm [0.020"].**

- ☐ Reinstall the *Air Locker* as before (i.e., with only one bearing cap).
- ☐ Release all spreader tension.


### 4.5 Approximating the Backlash for Tube Position

If the backlash is not close enough to the specified amount, the tube position cannot be accurately measured to modify the bearing cap for tube clearance. This must be checked before hand.

## 4 Installing the Air Locker

- ☐ Set a depth indicator on one of the ring gear teeth as in figure 9.
- ☐ While supporting the pinion gear by holding the drive shaft, rotate the differential in both directions while observing the maximum variation in depth from the indicator (i.e., the highest value minus the lowest value).
- ☐ Make sure backlash is less than 0.5mm.

**NOTE :** This backlash value is for the tube position only and will not be used for final assembly.

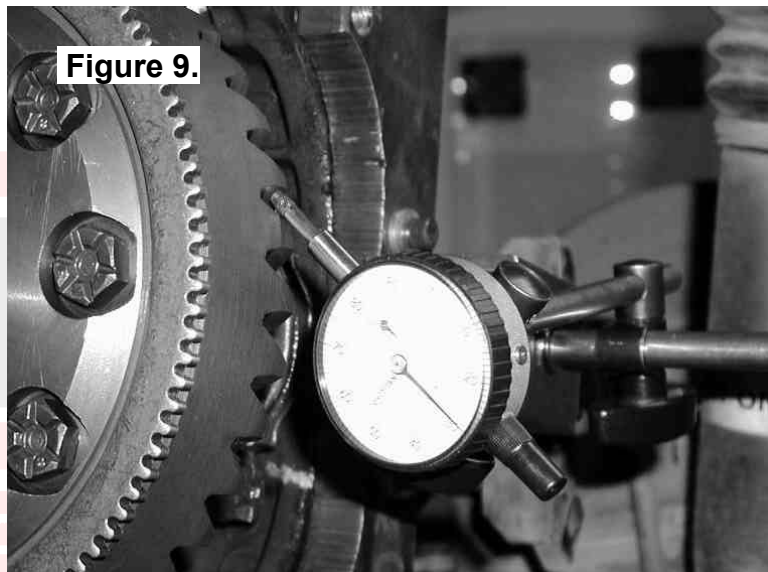

### 4.5.1 Re-Shimming the Backlash

**NOTE :** This step is only necessary when adjusting for incorrect backlash.

- ☐ Reapply the spreader to the differential housing.
- ☐ Remove the bearing cap.
- ☐ Remove the differential.
- ☐ To increase the amount of backlash, reduce the shim thickness 'D'. (Fig. 4.) and increase the shim thickness 'E' (Fig.8.) by the same amount. Reverse this step to decrease the backlash.
- ☐ Remount the differential as before.
- ☐ Release spreader tension.
- ☐ Re-check backlash.


## 4 Installing the Air Locker

### 4.6 Marking the Bearing Cap for Tube Clearance

With the *Air Locker* in place and less than 0.5mm of backlash, an accurate measurement for the seal housing tube clearance can be made.

**NOTE :** Take time and double check when taking your measurements, as bearing caps are custom fitted to the axle housing and cannot be replaced.

- ☐ With the seal housing tube pointing straight out, measure the distance from a fixed position inside the differential housing to the center of the seal housing tube. (Fig.10.)

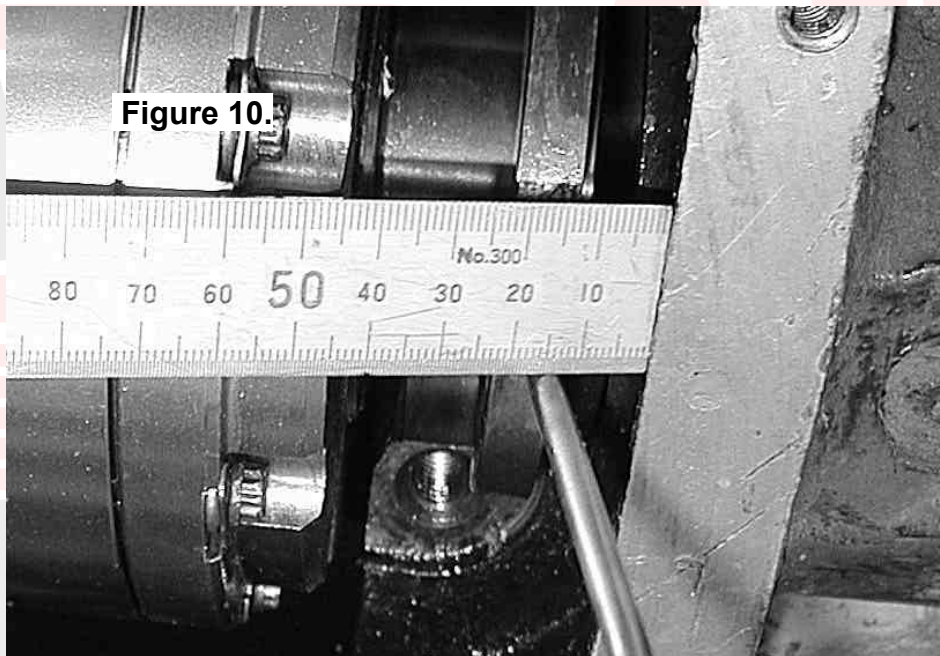

- ☐ Record your findings and recheck for accuracy.
- ☐ Remove the bearing cap from the ring gear side of the differential.
- ☐ Remove the *Air Locker* from the differential housing.
- ☐ Install the seal housing side bearing cap and hand-tighten the bearing cap bolts.

**NOTE :** It is very important to make sure the punch marks made on the differential housing while removing the differential are matched to the punch marks on the bearing cap. The bearing cap must be replaced exactly as it was removed. (Refer to section 2.4)

## 4 Installing the Air Locker

- ☐ Measure to the bearing cap from exactly the same position on the differential housing that you took the previous measurements from. (Fig.11.)
- ☐ Mark the tube position with a center punch where the clearance is to be made for the seal housing tube.



- ☐ Remove the bearing cap from the differential housing.
- ☐ Measure the distance from the center punch mark made on the bearing cap to the closest edge of the bearing cap.
- ☐ If the center punch mark is greater than 6.35mm [ $\frac{1}{4}$ "] from the closest edge of the bearing cap, it is recommended that a small hole be drilled through the bearing cap (Section 4.7.1). If less than 6.35mm [ $\frac{1}{4}$ "] from the edge it is recommended that a notch is filed into the side of the bearing cap to avoid break-through while drilling (Section 4.7.2).



## 4 Installing the Air Locker

### 4.7 Modifying the Bearing Cap

#### 4.7.1 Drilling the Bearing Cap

- ☐ Hold the bearing cap steady for drilling in a soft jawed vise clamp.

**NOTE :** Do not apply too much clamping pressure with the vise. The bearing cap may be damaged.

- ☐ Using a pedestal drill, drill a 6.35mm [ $\frac{1}{4}$ "] hole through the bearing cap where the seal housing tube hole has been marked.  
(Fig.12.)

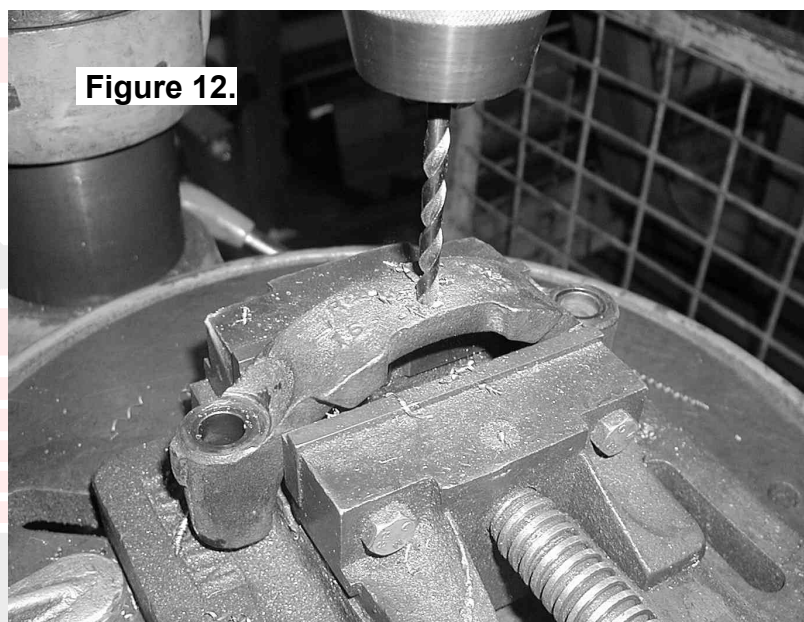


Figure 12.


- ☐ Remove the bearing cap from the vise, turn it upside down, and re-clamp it in the vise.
- ☐ The drilled hole must be chamfered approximately 3mm [ $\frac{1}{8}$ "] to remove any sharp edges that may chip-off and fall into the housing.  
(Fig. 13.)

## 4 Installing the Air Locker



### 4.7.2 Notching the Bearing Cap

- ☐ Use a soft jawed vise clamp to hold the bearing cap steady.
- ☐ Using a 6.35mm [ $\frac{1}{4}$ "] rat-tailed file. File out a notch in the bearing cap from the closest edge until an adequate notch has been cut around the position of the punch mark. (Fig. 14.).

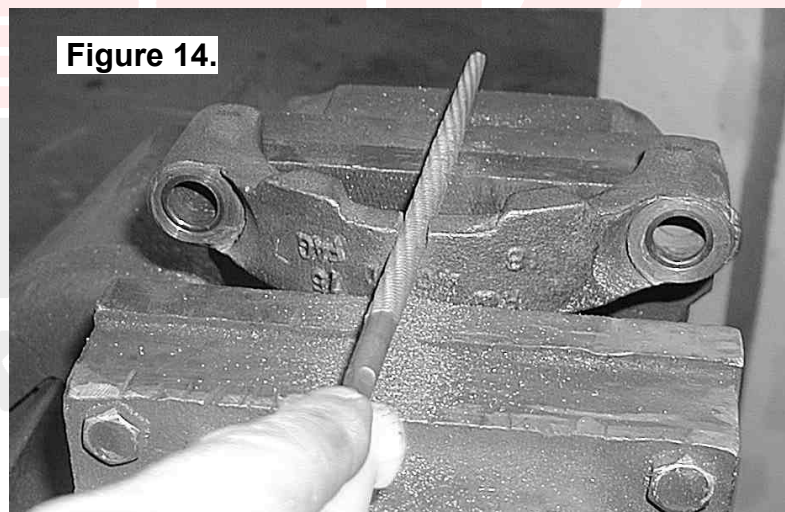


- ☐ File a chamfer around the inside edge of the notch to remove any sharp edges from the notch that may chip-off and fall into the housing.

## 4 Installing the Air Locker

### 4.8 Axle Tube Drainage Modification

On some axles there is a small groove in the lower section of the housing adjacent to the right hand carrier bearing (Fig.15.). If this groove is not present, the seal housing of the *Air Locker* could prevent the oil from draining out of the axle tube. This will cause the axle tube to fill with oil and take precious oil away from the differential. Your housing must be checked to ensure that this groove exists. If the groove is not present, the differential housing will have to be modified accordingly to allow the oil to drain.

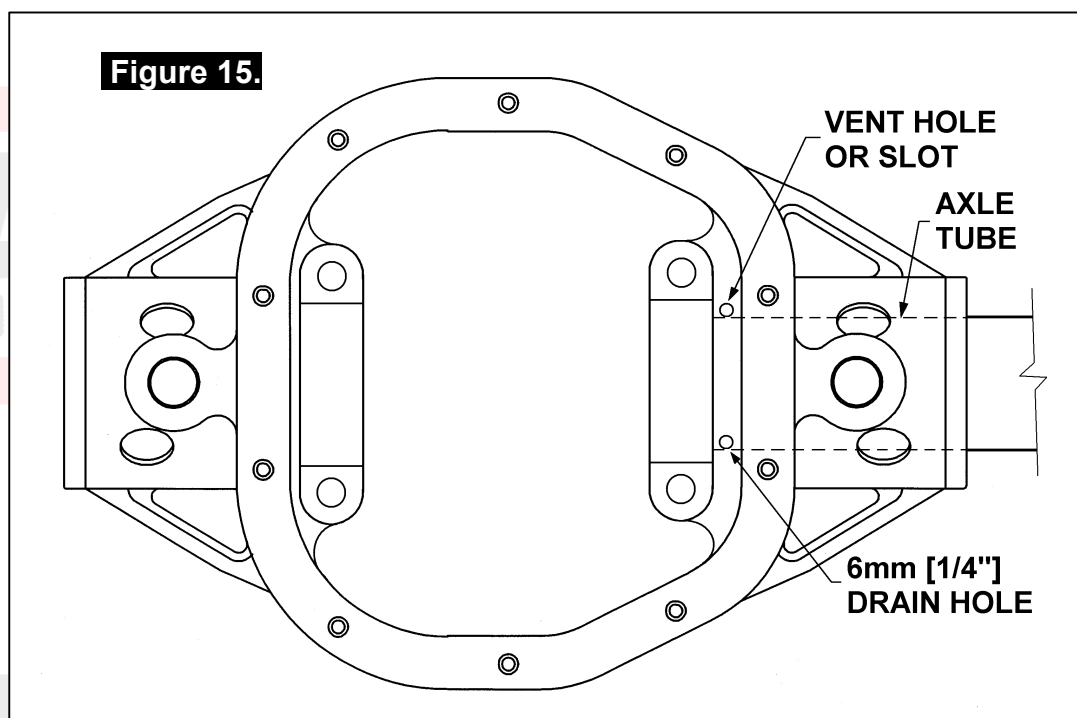

- ☐ Protect the pinion gear from damage or metal particle contamination with a rag.
- ☐ Protect both axle tubes from metal particles by plugging them (e.g., with a rag).
- ☐ Drill an oil drain hole in the lower section of the housing as shown in Figure 15.
- ☐ Deburr the hole to remove any sharp edges which may break off and fall into the differential.
- ☐ Remove the rags and wipe clean any metal particles left behind.



## 4 Installing the Air Locker

### 4.9 Final Air Locker Assembly

- ☐ Remove the seal housing, shim pack, and master shim, and clean all parts of the differential assembly. It is very important to make sure the seal housing grooves are free from any contaminants (eg: water, dirt, metal fillings, etc.)
- ☐ Lubricate the O-rings with oil (prior to assembly), then stretch them over the bearing journal and release them into the grooves.

**NOTE :** Do not roll the O-rings onto the seal housing as this will damage them.

- ☐ Place the bearing cups onto their respective bearing cones.
- ☐ Install the seal housing over the O-rings by gently applying a downward twisting motion. This will allow the O-rings to gently engage.
- ☐ Assemble the shim pack and master shim.
- ☐ Point the seal housing tube straight out of the housing, hold the shims and tapered roller bearing cups in place, and insert and hold the *Air Locker* into the differential housing.
- ☐ Install the bearing cap on the ring gear side.
- ☐ Check to see if the bearing cap on the seal housing side fits over the tube without fouling.

**NOTE :** Do not forget to check the bearing caps are turned the correct way around.


- ☐ Install all bearing cap bolts and torque to manufacturer's specs.

### 4.10 Final Backlash Checking

- ☐ Relieve all tension on the housing spreader.
- ☐ Tighten all bearing cap bolts with a torque wrench to the torque specified in your vehicle manufacturer's service manual.
- ☐ Set a depth indicator on one of the ring gear teeth as in Figure 16.
- ☐ While supporting the pinion gear by holding the drive shaft, rotate the differential in both directions while observing the maximum variation in depth from the indicator (i.e., the highest value minus the lowest value). This value is referred to as the ring and pinion backlash.

## 4 Installing the Air Locker

- ☐ Rotate the differential center 90° and measure again for accuracy.

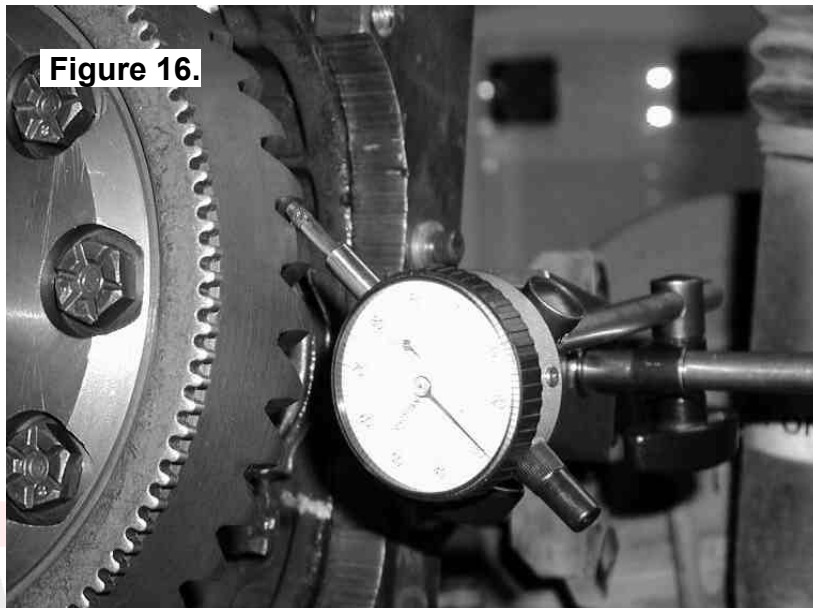

- ☐ Refer to your vehicle service manual for the specified maximum and minimum amounts of backlash. If the backlash is not within the specifications then the differential will have to be removed and re-shimmed.

### **4.10.1 Re-Shimming the Backlash**


**NOTE :** This step is only necessary when adjusting for incorrect backlash.

- ☐ Reapply the spreader to the differential housing.
- ☐ Remove the bearing caps.
- ☐ Remove the differential.
- ☐ To increase the amount of backlash, reduce the shim thickness 'D' (Fig.5.) and increase the shim thickness 'E' (Fig.8.) by the same amount. Reverse this step to decrease the backlash.
- ☐ Remount the differential as before.
- ☐ Release spreader tension.
- ☐ Check backlash again as before.

## 4 Installing the Air Locker

### 4.11 Profiling the Seal Housing Tube

- ☐ Without using sharp, jagged tools such as pliers (usually your hands are the best tool for this job), bend the seal housing tube so that it closely follows the profile of the differential housing and protrudes through the bulkhead port in the differential housing. (Fig. 17.)

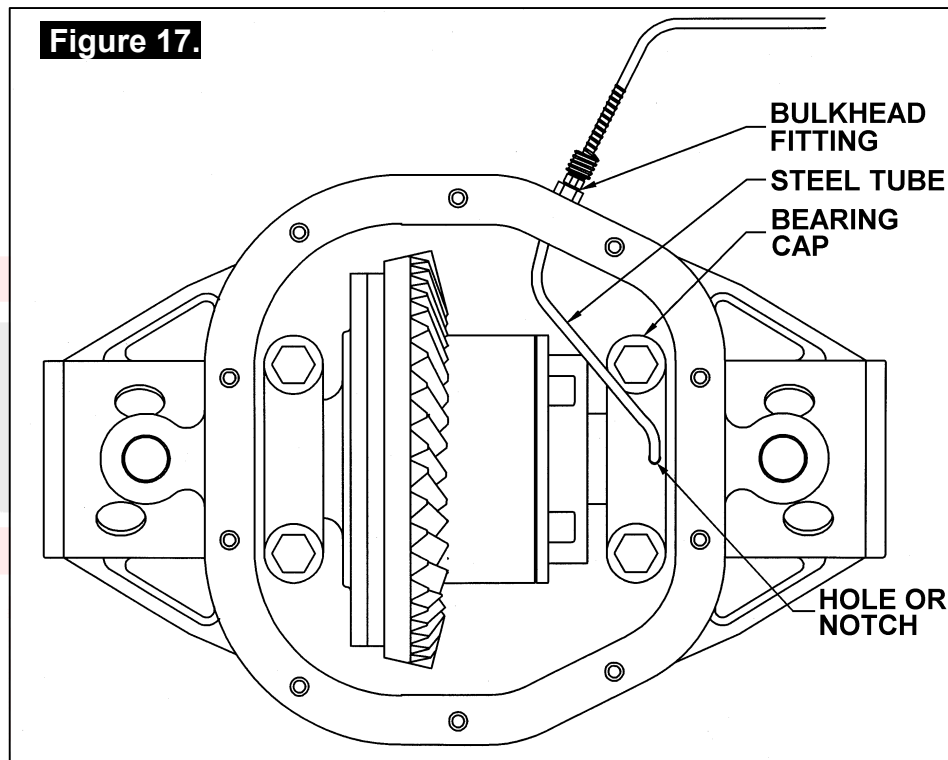

- ☐ Check that the contour of the tube will not interfere with the ring gear, differential, or the cover plate.

### 4.12 Setting Up the Inner Bulkhead Fitting


- ☐ Trim the seal housing tube that is extended outside the differential housing to approximately 20-25mm [0.8-1.0"] of extension using an automotive brake line tubing cutter.

**NOTE :** Never use a hacksaw for trimming the steel tube as this will leave metal fillings in the air system.



- ☐ Place the inner compression nut and the ferrule over the extended tube (Fig.19.). Approx. 5mm [0.2"] of seal housing tube should extend out of the ferrule.

## 4 Installing the Air Locker

**NOTE :** Be sure to use the correct size ferrule.  
(inside diameter of 4.76mm [3/16"])

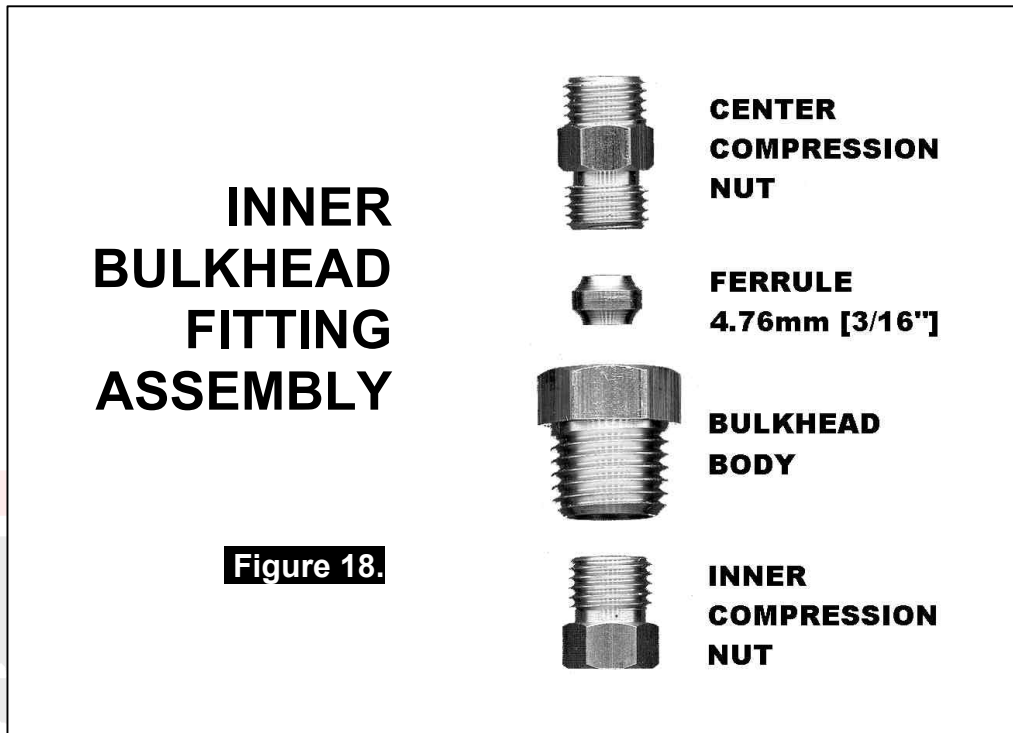

- ☐ Supporting the inner compression nut with an open-ended wrench, screw on the bulkhead body and tighten. (Fig.20.)
- ☐ While still supporting the inner compression nut, screw the center compression nut into the bulkhead body and tighten. This will permanently clamp the ferrule onto the seal housing tube.

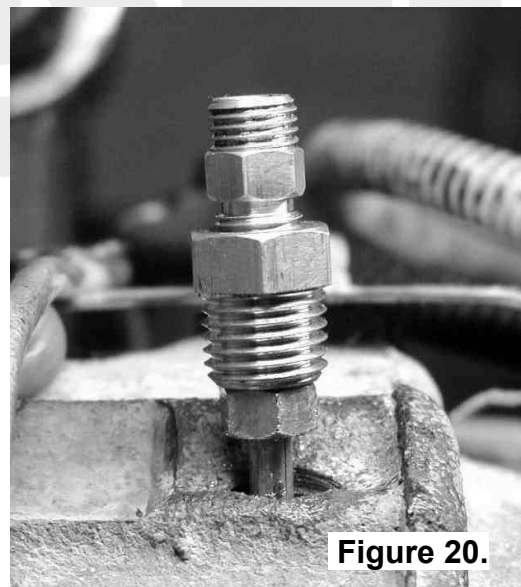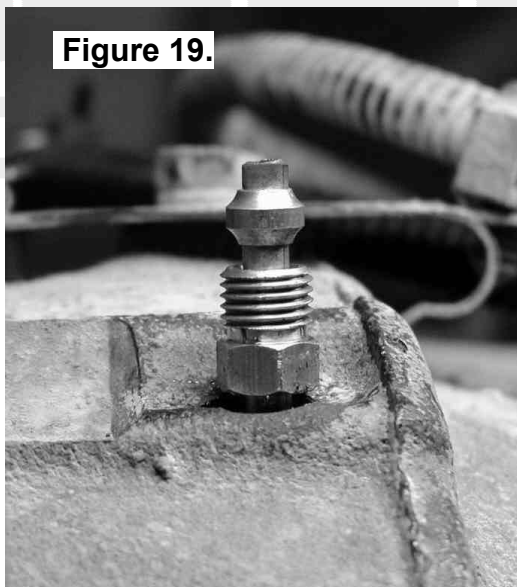

## 4 Installing the Air Locker

**NOTE :** Be sure to insert the correct end of the center compression nut into the bulkhead body. The thread has been partially relieved on the bulkhead side of the center compression nut to visually identify its orientation. (Fig.18.)

- ☐ Loosen the center compression nut 1 turn. The bulkhead body should now freely rotate on the seal housing tube.
- ☐ Apply a thread sealant to the threads of the bulkhead body, screw it into the bulkhead port, and tighten.
- ☐ Wipe the area clean of any excess thread sealant (inside and outside of the housing).
- ☐ Again check that no part of the seal housing tube comes in contact with the moving differential components. Less than 8mm [5/16"] should be considered too little clearance. Gently bend the tube away from moving parts if necessary.
- ☐ Support the inner compression nut from rotation with a wrench (from inside the housing) and tighten the center compression nut.

### 4.13 Reinstalling the Axles

- ☐ Remove the differential housing spreader.
- ☐ Insert both axles fully into the housing and gently tap them inward.

**NOTE :** Be careful not to damage the axle oil seals with the spline of the axle.

- ☐ Reassemble the brakes, differential and wheels to the vehicle according to your vehicle's service manual.

## 5 Installing the Air System

### 5.1 Mounting the Solenoid


#### 5.1.1 Connection to an ARB Air Compressor (Fig.21.)

- ☐ Remove one of the 1/8" BSP plugs from its port in the compressor tank.
- ☐ Apply Teflon paste to the nipple (1/8" X 1/8" BSP) and insert it into the port and tighten.
- ☐ Apply Teflon paste to the free end of the nipple.
- ☐ Assemble the inlet port side of the solenoid (stamped with a '1') onto the nipple and tighten. The solenoid should be rotated into a position that does not obstruct any other ports on the compressor tank.

**NOTE :**

The solenoid exhausts compressed air through the center of the black retaining cap when the *Air Locker* is disengaged. Make sure this orifice cannot be obstructed.

- ☐ Apply Teflon paste to the threads of the 5mm push-in fitting and assemble it into the solenoid outlet port (stamped "2") and tighten.

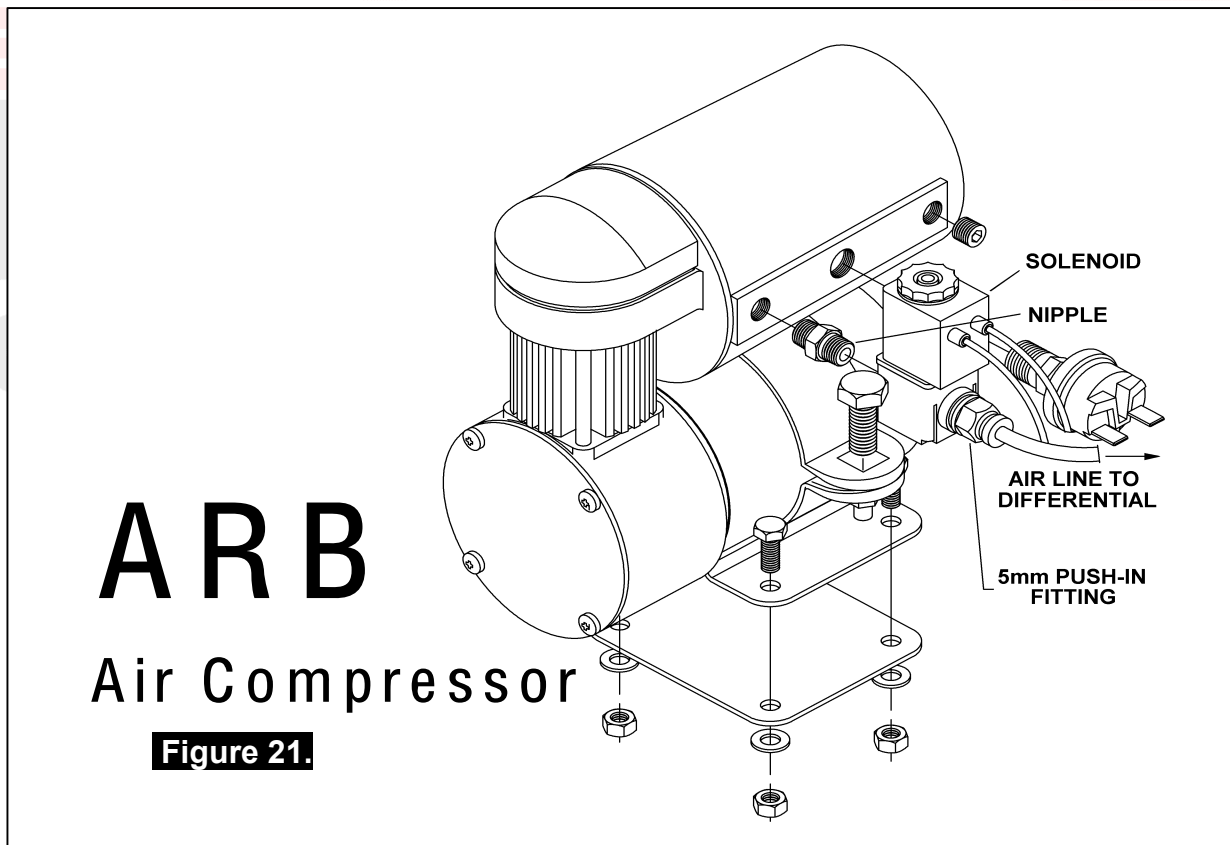



## 5 Installing the Air System

### 5.1.2 Connection to an Alternate Air Source

For ease of installation, quality of air supply, and a high level of dependability from your *Air Locker(s)*, ARB strongly recommends use of a genuine ARB Air Compressor, however, the *Air Locker* air system can be operated on any alternate air source that meets each of the following guidelines:

- ☐ Must supply a minimum of 85PSI [586kPa].
- ☐ The supply must never exceed 105PSI [724kPa].
- ☐ The Air source should have a tank capacity that enables it to actuate the *Air Locker(s)* in one charge so that no hesitation is experienced when locking one or two differentials.

**HINT :**

**A good way to insure that you have the necessary capacity is to make sure you can engage, disengage, and then reengage your *Air Locker(s)* without the air source having to regenerate (e.g., without the compressor turning on to refill the tank).**

- ☐ Must supply clean air, free of rust, dirt, water, or other foreign matter.
- ☐ Must match the 1/8" BSP porting of the *Air Locker* solenoid.
- ☐ Mount solenoid within close proximity of the air supply and secure it from the effects of vibration and shock.
- ☐ Connect the air supply to the 1/8" BSP inlet port of the solenoid (stamped "1" on the solenoid body) using thread sealant.

**IMPORTANT :**

**ARB cannot warrant your *Air Locker(s)* against damage caused as a result of using an alternate air supply. If you have any doubts as to the suitability of your air system to use in an *Air Locker* system, consult your ARB distributor.**

## 5 Installing the Air System

### 5.2 Running and Securing the Air Line

The path taken by the air line from your air source (i.e., compressor) to your *Air Locker* is unique to your vehicle and the position of your air source. Plan ahead carefully when running the air line and always follow these guidelines:

- ☐ Account for axle travel when running the line from the axle to a fixed point on the vehicle. Leave enough slack in the air line to allow for maximum suspension travel in both directions.
- ☐ Avoid leaving large lengths of air line hanging underneath the vehicle where they may get tangled on rocks, sticks, etc.

**HINT :** Cable tying the air line to one of your flexible brake lines will account for axle travel and should help keep your line from getting snagged.

- ☐ Run the air line all the way from the compressor to the differential before trimming either end of the line to length. This will save complications that may arise if the air line has to be removed.
- ☐ Make sure the line does not contact sharp edges or abrasive surfaces that may damage the air line over time.
- ☐ Do not run the air line around tight bends which may kink the air line and restrict or block the air flow.
- ☐ Keep the air line well away from your vehicle's exhaust components. Air lines will melt if subjected to extreme heat.
- ☐ Do not run more air line than necessary. Excess line volume created when coiling the left over hose, using unusually large diameter hose, etc., will increase drain on the compressor tank resulting in the compressor running more often than needed.
- ☐ Support the air line by tying it back with cable ties wherever possible.
- ☐ At the solenoid end of the air line, trim the line to length with a sharp knife.

**NOTE :** To remove the air line from the push-in fitting; while holding the flange of the fitting out, push the air line into the fitting as far as possible, then press the flange inward, then pull the air line free of the fitting.




## 5 Installing the Air System

- ☐ To attach the air line to the push-in fitting of the solenoid; insert the line firmly into the fitting, pull outward on the flange of the fitting while holding the line as far into the fitting as possible, and then gently pull outward on the air line to clamp the line in place.

### 5.3 Connection to the Bulkhead Fitting

- ☐ Trim the air line to length using a sharp knife.
- ☐ Insert the support spring over the end of the air line - small end first. (Fig.22.)
- ☐ Insert the outer compression nut over the air line.
- ☐ Insert the 5mm [0.197"] ferrule over the end of the air line. Leave approx. 5mm of tubing between the ferrule and the end of the tube.

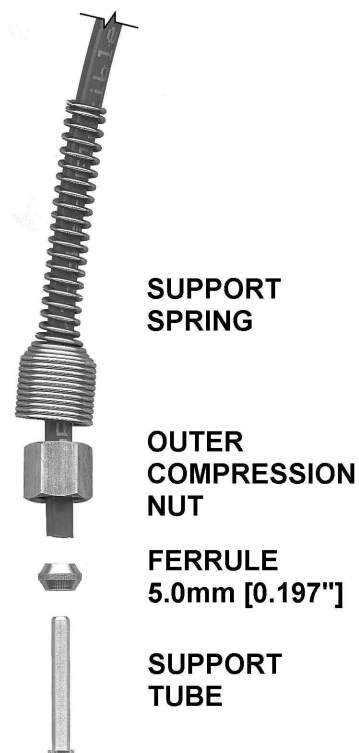

- ☐ Insert the support tube all the way into the end of the air line.

## 5 Installing the Air System

**HINT :** If the support tube is too difficult to insert, place the end of the air line into a cup of boiled water to soften the tubing.

- ☐ Insert the tube end all the way into the center compression nut.
- ☐ Screw on the outer compression nut and tighten. The ferrule and support tube are now permanently attached.
- ☐ Assemble the support spring over the outside of the outer compression nut.
- ☐ Secure any loose sections of tube with a cable tie.



## 6 Mounting & Connecting the Electrical System

### 6.1 Mounting the Actuator Switch(es)

*Air Locker* actuator switch(es) can be easily panel mounted inside the vehicle in a 21mm x 36.5mm [0.83" x 1.44"] rectangular cutout.

**NOTE :** Only attach the cover plate to the face of the switch once the switch has been mounted and wired correctly as the cover plates are designed to be difficult to remove.

For reasons of safety and for ease of operation, the *Air Locker* actuator switch(es) should be mounted in a location picked to best suit the operator. Make sure you have taken the following points into consideration:

- ☐ Switch(es) MUST be mounted and should never be allowed to simply dangle from the wiring loom during vehicle use.
- ☐ Switch(es) should be within easy reach of the driver. Ideally, any *Air Locker* switch should be able to be operated without physical effort or distraction to the driver.
- ☐ Switch(es) should be mounted within the line of sight of the driver so that switch position ('ON' or 'OFF') can be visually determined by the rocker position and the illumination state.
- ☐ The position of the switch(es) should best eliminate any possibility of accidental operation by the driver or one of the passengers.
- ☐ Switch cutout position(s) must be located in an area with a minimum of 50mm [2"] of clearance behind the face of the cutout.
- ☐ Switch(es) should not be mounted where they will be exposed to water (e.g., in the lower section of an inner door panel).
- ☐ ARB recommends that you apply the *Air Locker* Warning Sticker (ARB part # 210101) within close visual proximity of the switch location.

**NOTE :** If no adequate position can be found on existing dashboard panels, a surface mounted bracket (Fig. 23.) may be purchased from your *ARB Air Locker* distributor to suit 1, 2, or 3 switches.

## 6 Mounting & Connecting the Electrical System



Figure 23.


### 6.2 Wiring the Actuator System

#### 6.2.1 Connection to an ARB Air Compressor

When wiring the *Air Locker* actuator switch(es) and solenoid(s) to an ARB Air Compressor, all connections can easily be set up directly from the supplied wiring loom. (Fig. 24.)

**NOTE :** Refer to your ARB Air Compressor Installation Guide for details on configuring your installation.

## 6 Mounting & Connecting the Electrical System

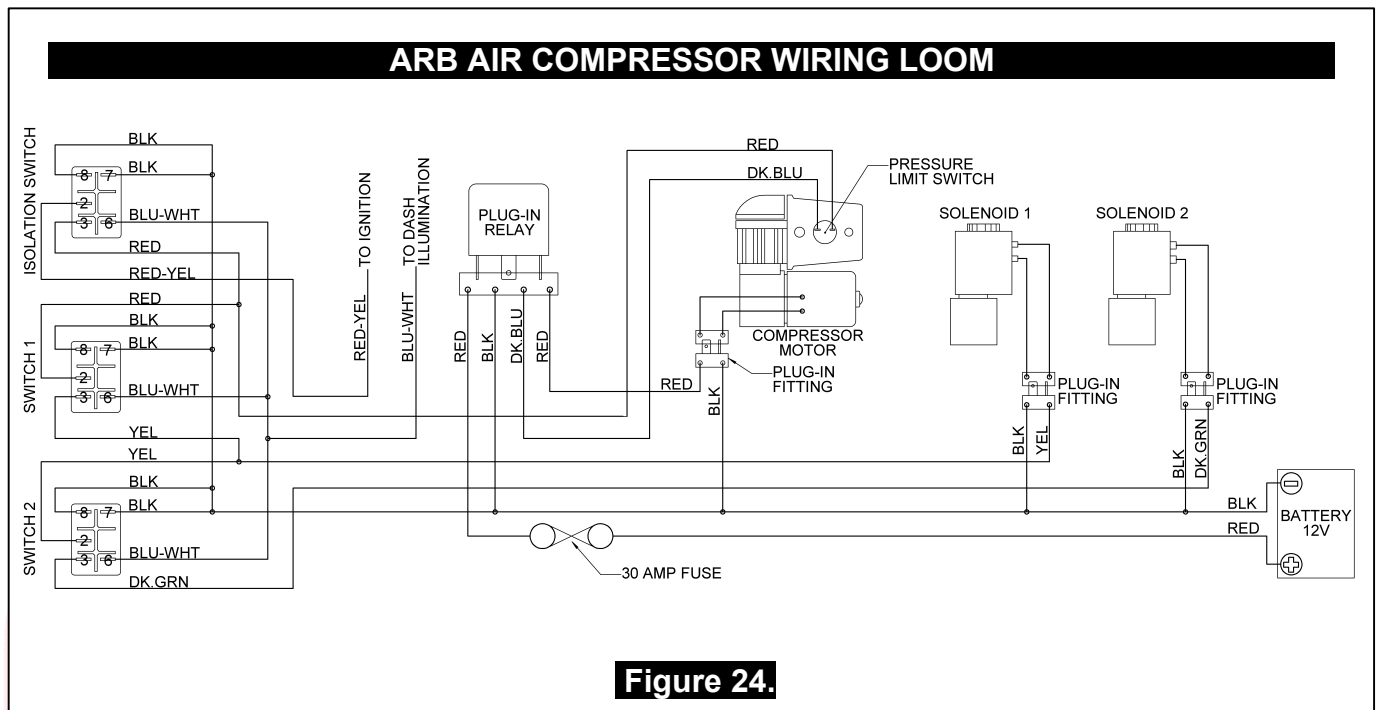

## 6 Mounting & Connecting the Electrical System


### 6.2.2 Connection to an Alternate Air Source

When connecting the actuation switch to an alternate air source, the switch(es) should be wired according to figures 26. and 27., depending on whether one or two *Air Lockers* will be installed in the vehicle.

#### 6.2.2.1 Single Air Locker System

- ☐ If only one *Air Locker* is to be installed in the system, the switch and solenoid should be wired according to figure 26. regardless of whether the *Air Locker* has been installed in the front or rear axle of the vehicle.
- ☐ Attach the appropriate switch cover (i.e., 'FRONT' or 'REAR') to the switch.

**NOTE :** Refer to Figure 25. for the correct switch terminal identification and switch orientation.

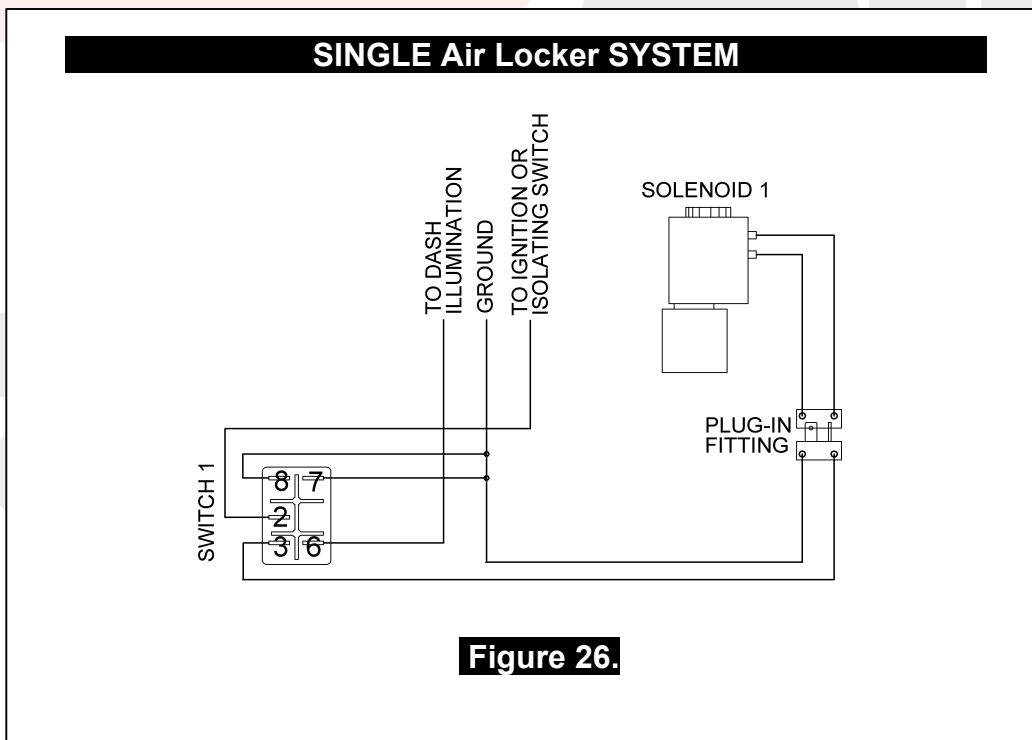


## 6 Mounting & Connecting the Electrical System

### 6.2.2.2 Dual Air Locker System

- ☐ If two *Air Lockers* are to be installed in the system, ARB recommends that the switches and solenoids be wired according to figure 27. For safety reasons, this configuration allows SOLENOID 2 to be actuated only if SOLENOID 1 is already on.
- ☐ Attach the “REAR AIR LOCKER” switch cover to SWITCH 1, and the “FRONT AIR LOCKER” switch cover to SWITCH 2.

**NOTE :** Refer to Figure 25. for the correct switch terminal identification and switch orientation.

- ☐ Configure SOLENOID 1 as the air line leading to the rear axle *Air Locker*, and SOLENOID 2 as the air line leading to the front axle *Air Locker*.

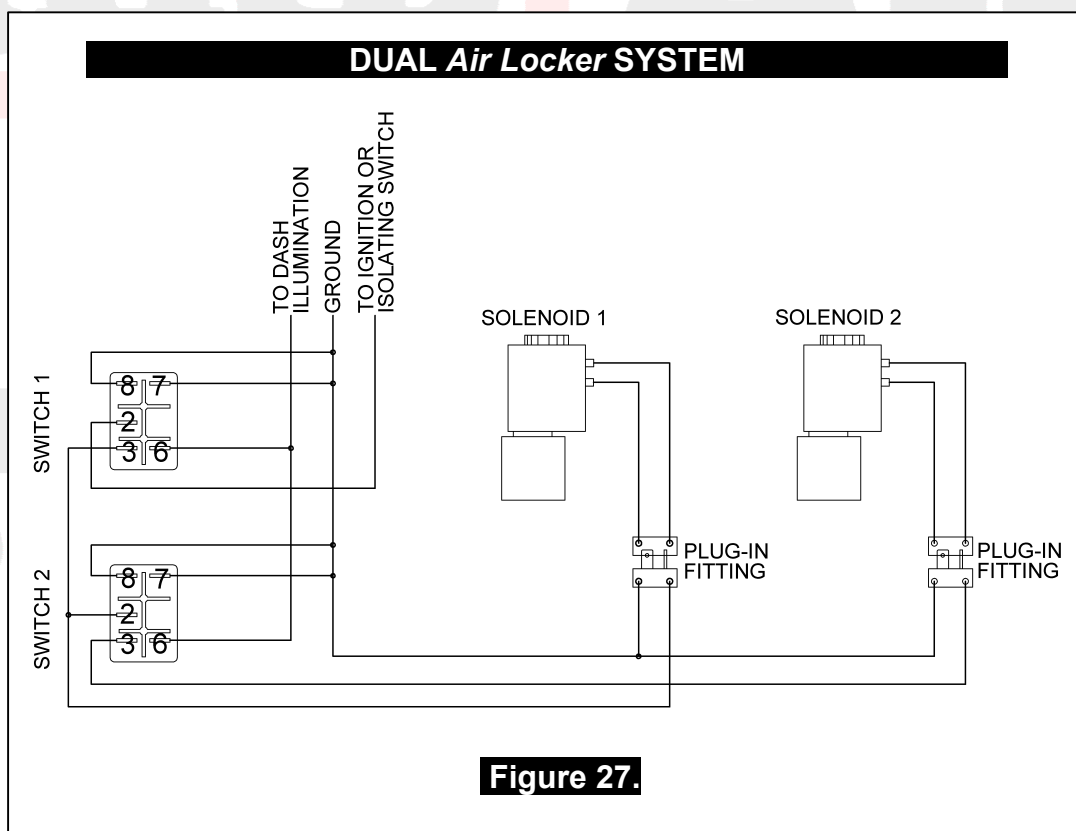

## 7 Testing & Final Assembly

### 7.1 Leak Testing

- ☐ With the vehicle parked and the engine off, turn the compressor on and wait until the air system is fully charged.

**NOTE :** With the *Air Locker(s)* disengaged, the air source (i.e., compressor) should not have to recharge over time. Intermittent recharging without *Air Locker* use usually indicates a leak at the solenoid fittings or at the compressor tank O-ring seal.

- ☐ Actuate the *Air Locker(s)*.
- ☐ The compressor should not come on again for a period of at least 15min. Air system recharging within that time period would indicate that a leak is present in the system.

**NOTE :** If an alternate air source (e.g., an air cylinder or a belt driven air pump) is used instead of a compressor, the air system will have to be leak tested with a pressure gauge and a shut-off valve in series before the solenoid input.

- ☐ If a leak is found to be present, spray a soap and water mixture onto all air fittings in the system while the compressor is fully charged. Bubbles should appear at any leak points.
- ☐ Check that leaky fittings have been adequately tightened.
- ☐ Disassemble, clean threads, and reapply thread sealant if leaking persists.

### 7.2 Testing the Air Locker Actuation

To test that your air system, electrical system, and your *Air Locker* differential is functioning correctly:

- ☐ Support the vehicle such that the wheels are free to rotate (e.g., on axle stands, a chassis hoist, etc.)
- ☐ Leave the parking brake off, the transmission in neutral, and the *Air Locker* switch 'OFF'.



## 7 Testing & Final Assembly

- ☐ Turn the ignition to the 'ON' position (leaving the motor off). The large illuminating symbol on the *Air Locker* switch cover should be 'OFF'.
- ☐ Turn the compressor (or alternate air source) on to charge the air supply up to its maximum pressure.
- ☐ Rotate one wheel by hand.
- ☐ The wheel should rotate freely and the opposite wheel should be turning in the opposite direction without any resistance or mechanical noise from within the differential.
- ☐ Turn the *Air Locker* switch to the 'ON' position. The illuminated symbol on the switch cover should light up.
- ☐ Rotate the same wheel again.
- ☐ Both wheels should rotate together.
- ☐ Turn the switch off again.
- ☐ Rotate the same wheel.
- ☐ The wheels should again rotate in opposite directions.

### 7.3 Re-Sealing & Filling the Differential

**NOTE :** Consult the *ARB Air Locker Operating & Service Manual* for recommendations on differential lubricant specifications.

- ☐ Replace the differential cover using gasket sealant or a new standard differential cover gasket for your make of vehicle.
- ☐ Refill the differential until level with the filler hole.
- ☐ Rotate the differential center 2 full turns.
- ☐ Check the oil level and add oil if necessary.
- ☐ Replace filler plug (apply thread sealant to filler plug before inserting if it is a threaded type plug).
- ☐ Wipe differential housing clean of any oil or grease which may collect dirt or other abrasive particles.

## 7 Testing & Final Assembly

### 7.4 Post-Installation Check List

Now that the *Air Locker* installation has been completed, ARB recommends that you take the time to complete the following check list just to insure that you haven't missed any of the vital steps.

- ☐ The air system has been leak tested.
- ☐ Thread locking compound was used on the ring gear bolts.
- ☐ All torque settings comply with the vehicle manufacturer's specs and were set with an accurate torque wrench.
- ☐ Differential fluid complies with ARB recommendations and has been filled to the correct level.
- ☐ All air lines and wiring have been securely cable tied to resist snagging.
- ☐ Switch(es) have been securely mounted within operator reach, yet well away from danger of accidental engagement.
- ☐ Switch(es) function properly and illuminate to indicate that *Air Locker(s)* are engaged.
- ☐ All operators who are to use the *Air Locker* have read, and fully understand the *ARB Air Locker Operating & Service Manual*.
- ☐ The *Air Locker* Warning Sticker has been located within close proximity of the actuator switch(es).

INSTALLATION PERFORMED BY: \_\_\_\_\_

DATE OF INSTALLATION: \_\_\_\_\_

ODOMETER READING: \_\_\_\_\_

ARB AIR LOCKER SERIAL No: \_\_\_\_\_



## 7 Testing & Final Assembly

### 8.1 Exploded Assembly Diagram

(See itemized parts list overleaf)

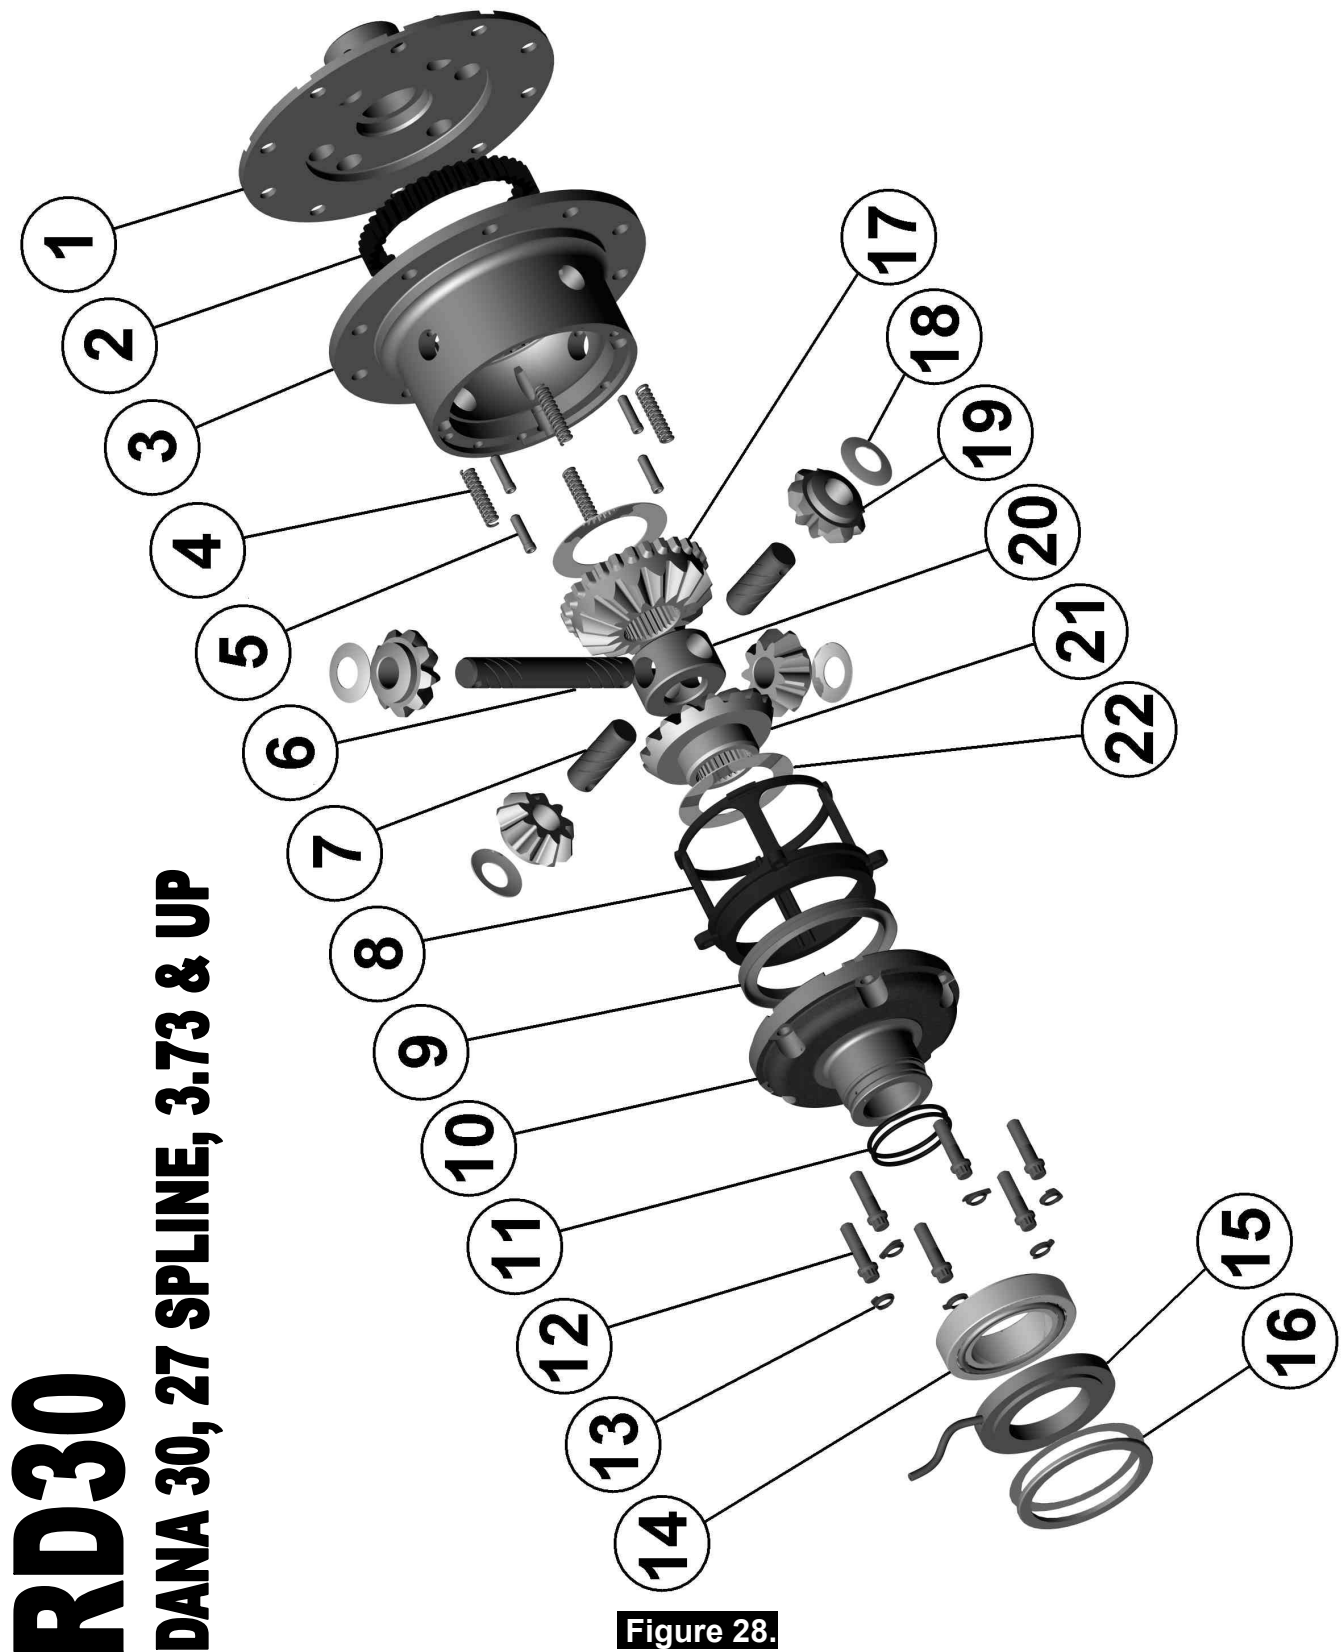


Figure 28.

## 8 Parts List

### 8.2 Itemized Parts List

(See exploded diagram figure 28.)

AIR LOCKER MODEL No. : RD30			
ITEM #	QTY	DESCRIPTION	PART #
01	1	FLANGE CAP	021801
02	1	CLUTCH GEAR	050501
03	1	DIFFERENTIAL CASE	011901
04	4	PISTON SPRING	150102
05	4	CROSS SHAFT RETAINING PIN	120401
06	1	LONG CROSS SHAFT	060104
07	2	SHORT CROSS SHAFT	060306
08	1	PISTON (Polyamide)	040601
09	1	U-RING	160303
10	1	CYLINDER CAP	030901
11	2	SEAL HOUSING O-RING	160210
12	6	CYLINDER CAP RETAINING BOLT	200207
13	6	TAB WASHER – 6mm	150402
14	1	TAPERED ROLLER BEARING	160105
15	1	SEAL HOUSING	080603
16	1	SHIM KIT	SHK003
17	1	SPLINED SIDE GEAR	131001R
18	4	PINION THRUST WASHER	151105
19	4	PINION GEAR	140501R
20	1	SPIDER BLOCK	070501
21	1	SIDE GEAR	130901R
22	2	SIDE GEAR THRUST WASHER	151005
*	1	BULKHEAD FITTING	170102
*	1	PUSH-IN FITTING, 5mm (R1 5 1/8")	170201
*	1	AIR LINE (5mm DIA X 6m LONG)	170301
*	1	NIPPLE, 1/8" BSP, MALE TO MALE	170501
*	1	SOLENOID VALVE	180103
*	1	ACTUATOR SWITCH	180209
*	1	SWITCH COVER (FRONT)	180210
*	10	CABLE TIE	180301
*	1	WARNING LABEL	210101
*	1	BUMPER STICKER	210102
*	1	OPERATION & SERVICE MANUAL	210200
*	1	INSTALLATION GUIDE	210230

\* Not illustrated in exploded view.